


WM-AI

Wiring Diagrams

Page	No.	Normal	POP	JWF	B+PS
1	100-006-6877-002(Non ETL)	○	-	○	○
1	100-012-4509-001(CE)	-	○	-	-
1	100-042-1509-001(ETL)	○	○	○	○
2	100-006-6887-001	○	○	○	○
3	100-006-6888-001	○	○	○	○
4	100-006-6889-001	○	○	-	○
4	100-012-4745-00	-	-	○	-
5	100-006-6890-001	○	○	○	○
6	100-006-6891-002	○	○	○	○
7	100-006-6892-002	○	-	○	○
8	100-006-6893-001	○	○	○	○
9	100-006-6894-001	○	○	○	○
10	100-006-6895-003	○	○	○	○
11	100-006-6896-001	○	○	○	○
12	100-012-4445-00	○	○	○	○
13	100-012-4508-001	○	○	○	○
14	100-020-5060-001	-	-	-	○
15	100-020-5373-001	-	-	-	○


Page 1 (non ETL) 100-006-6877-002



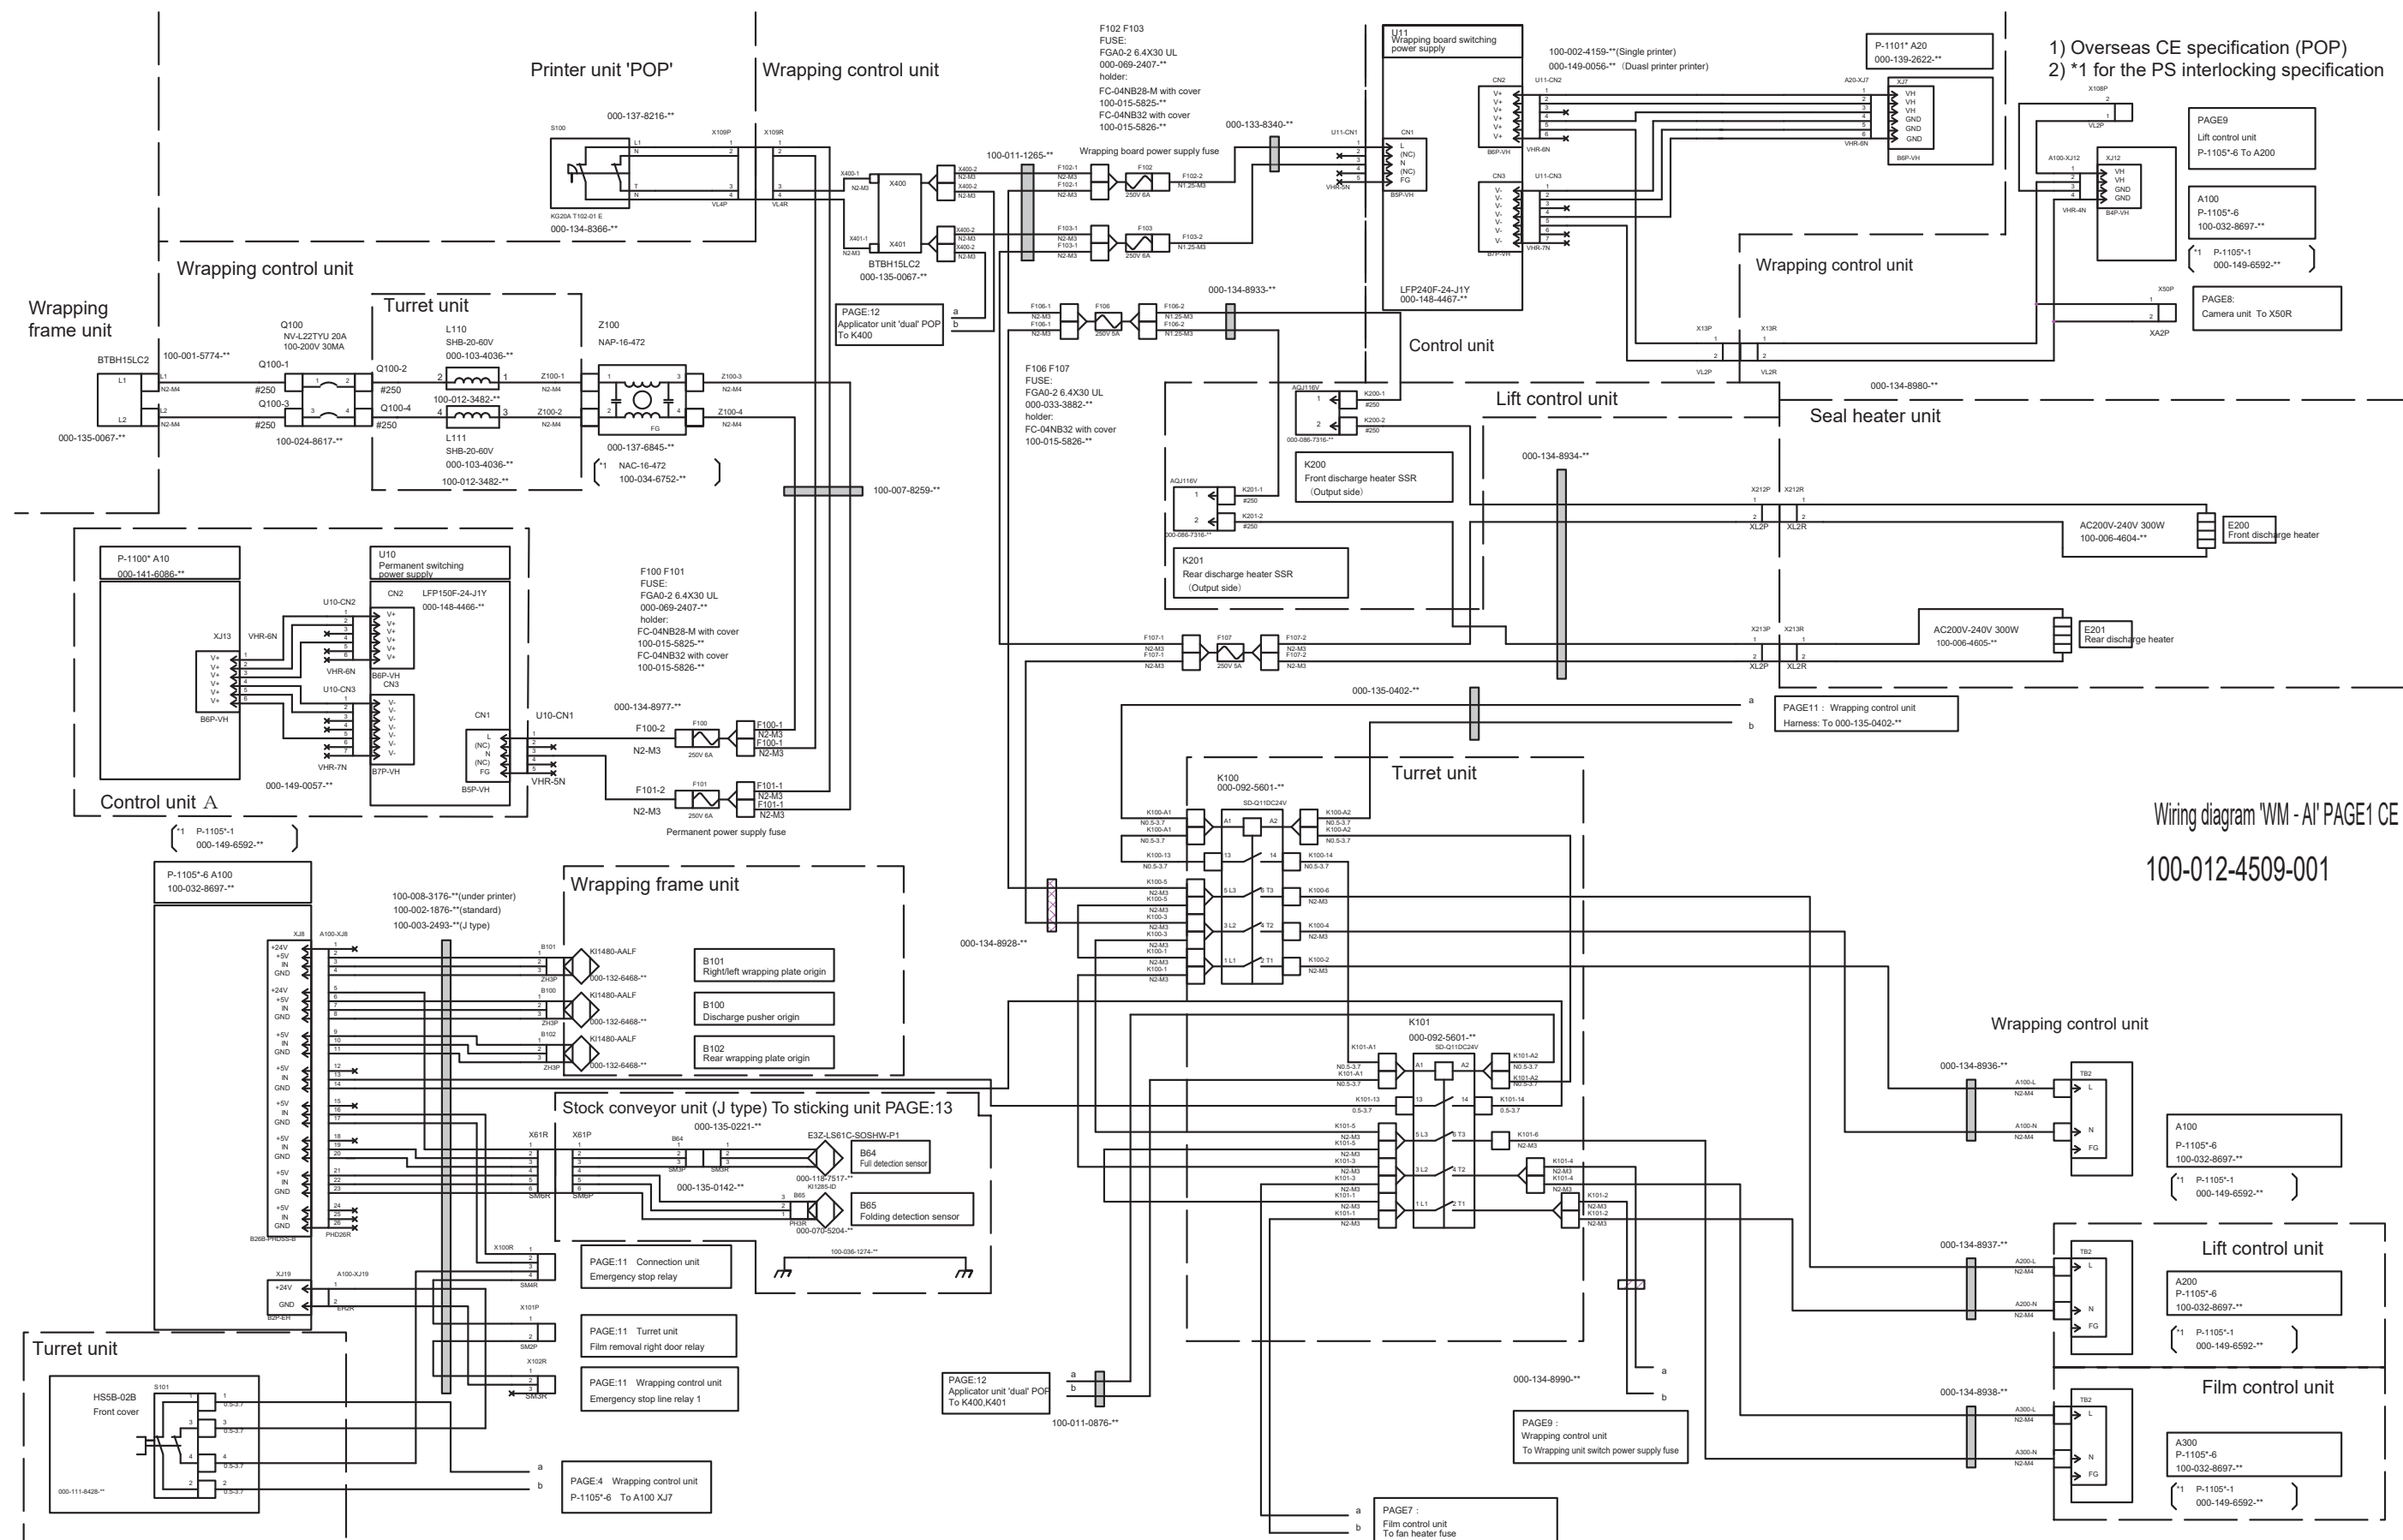


Wiring Diagrams

Page 1(ETL) 100-042-1509-001

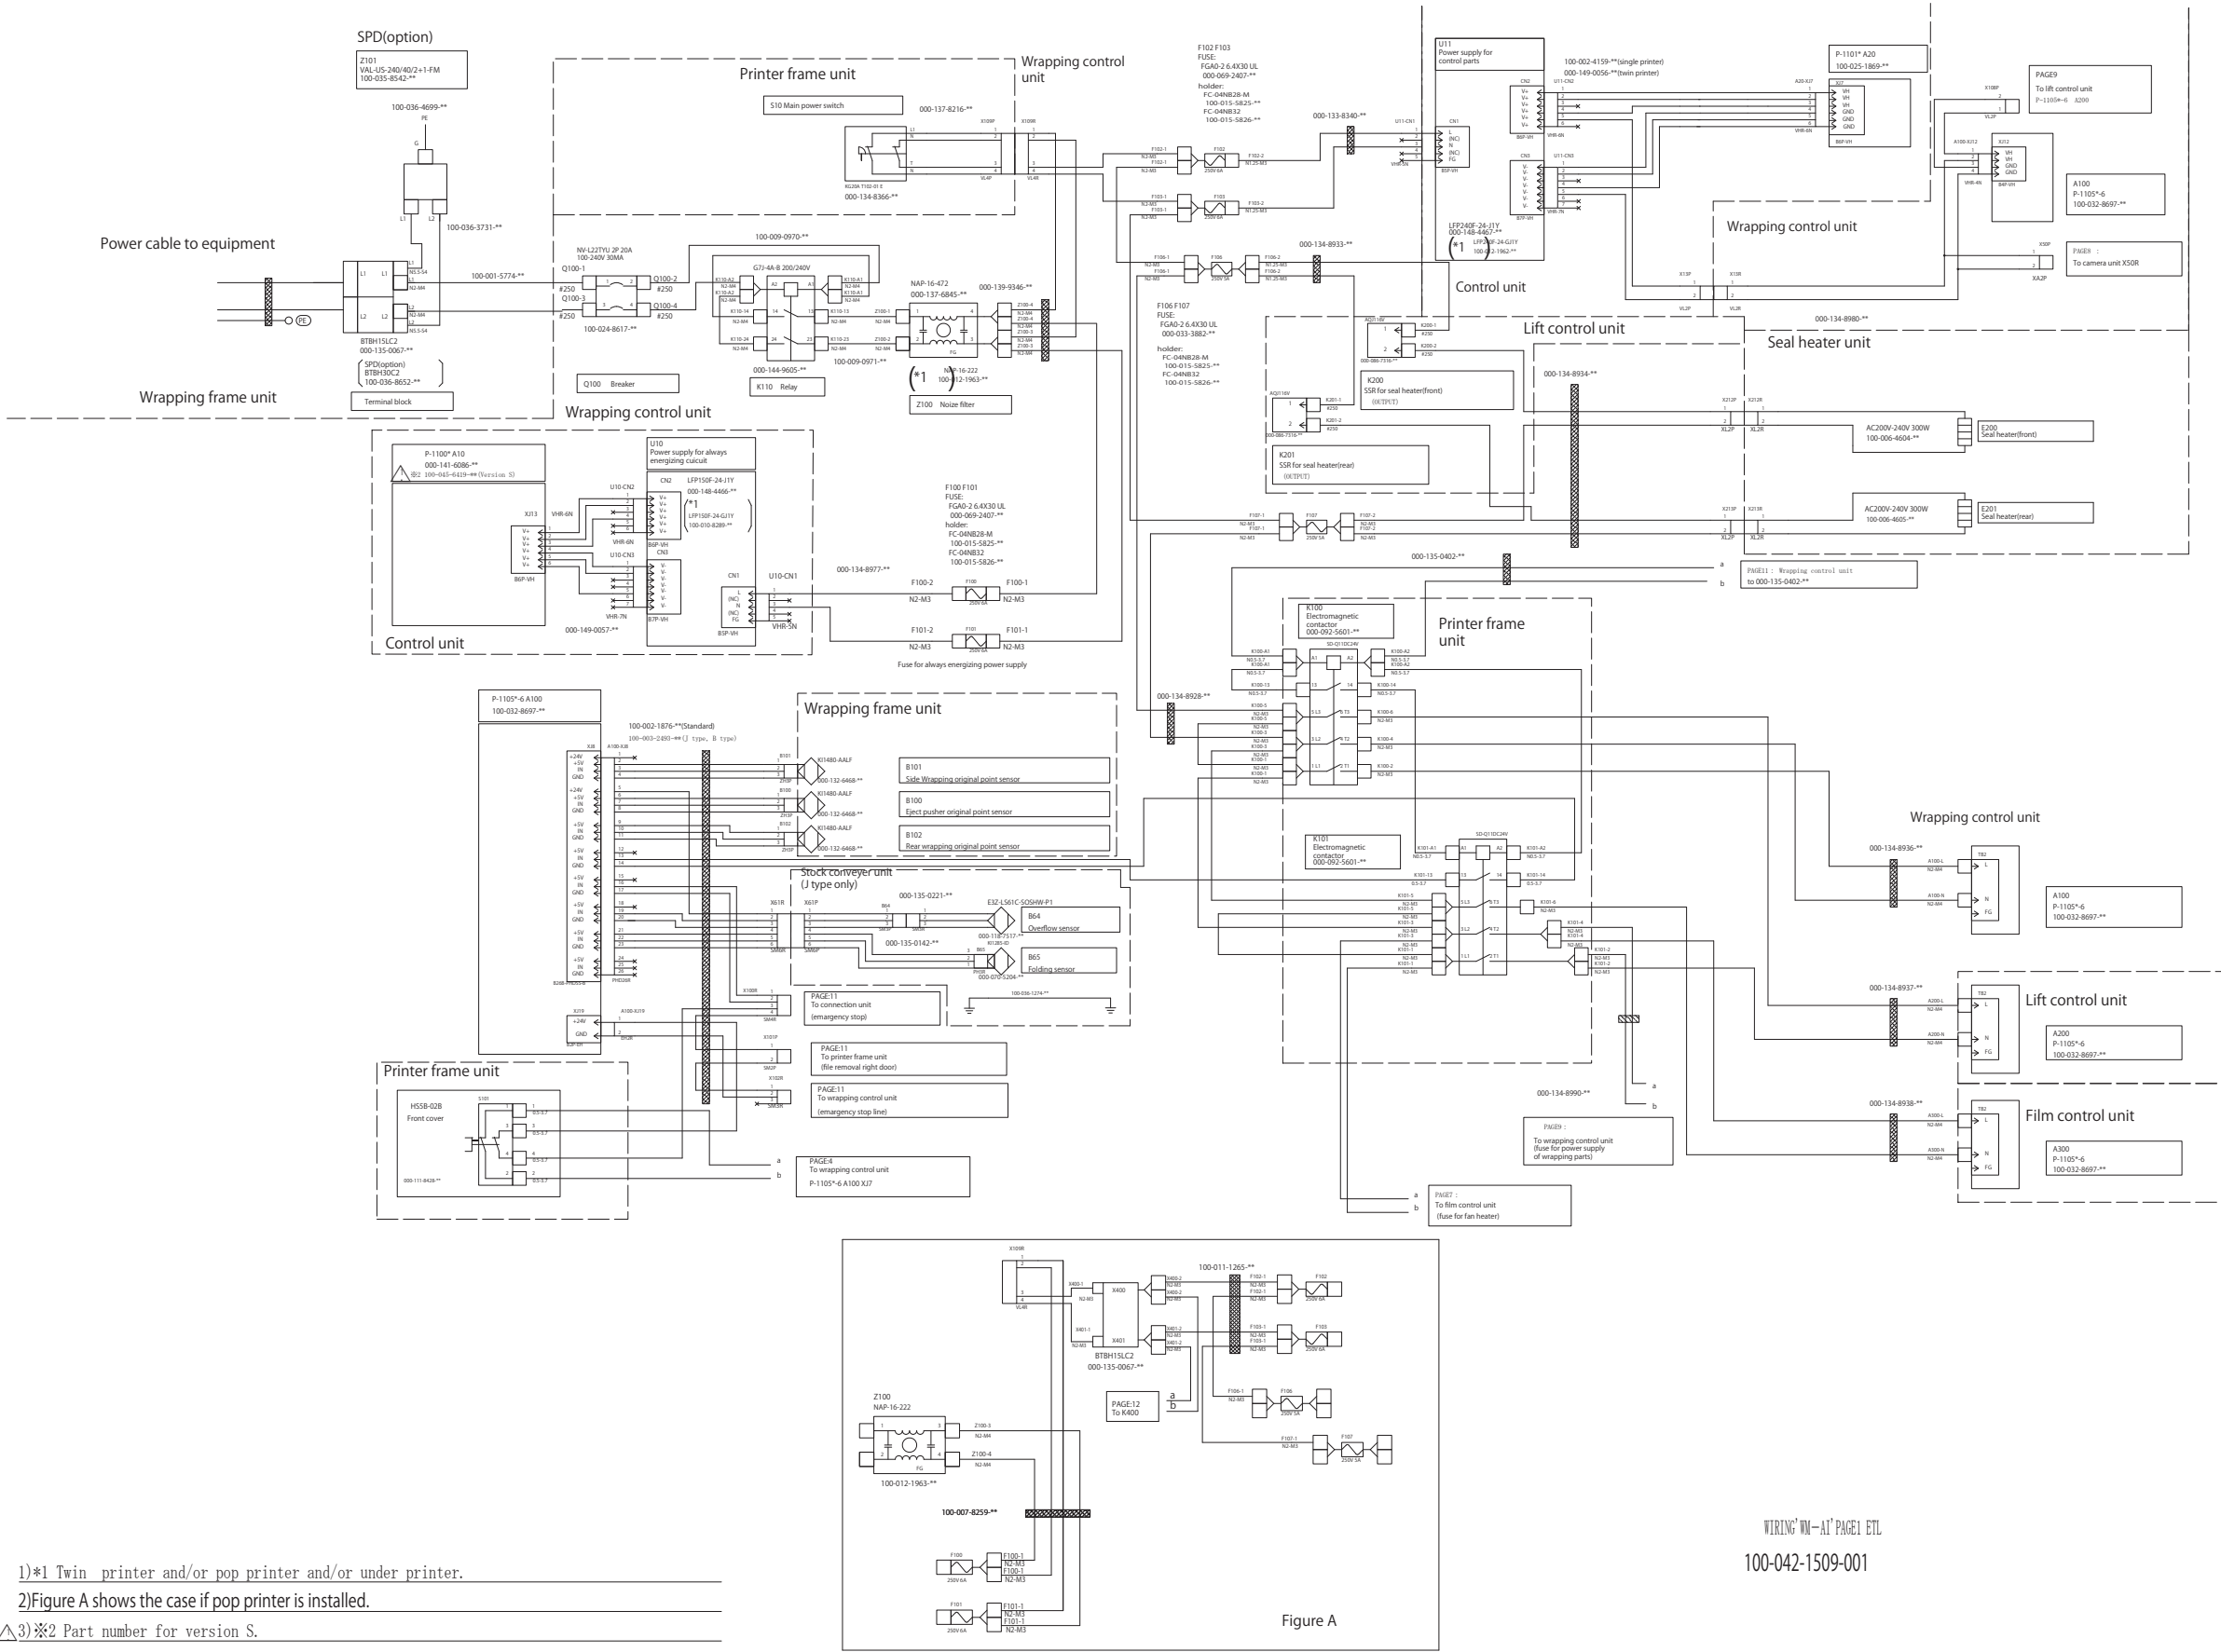


1)*1 Twin printer and/or pop printer and/or under printer.
2)Figure A shows the case if pop printer is installed.
3)*2 Part number for version S.

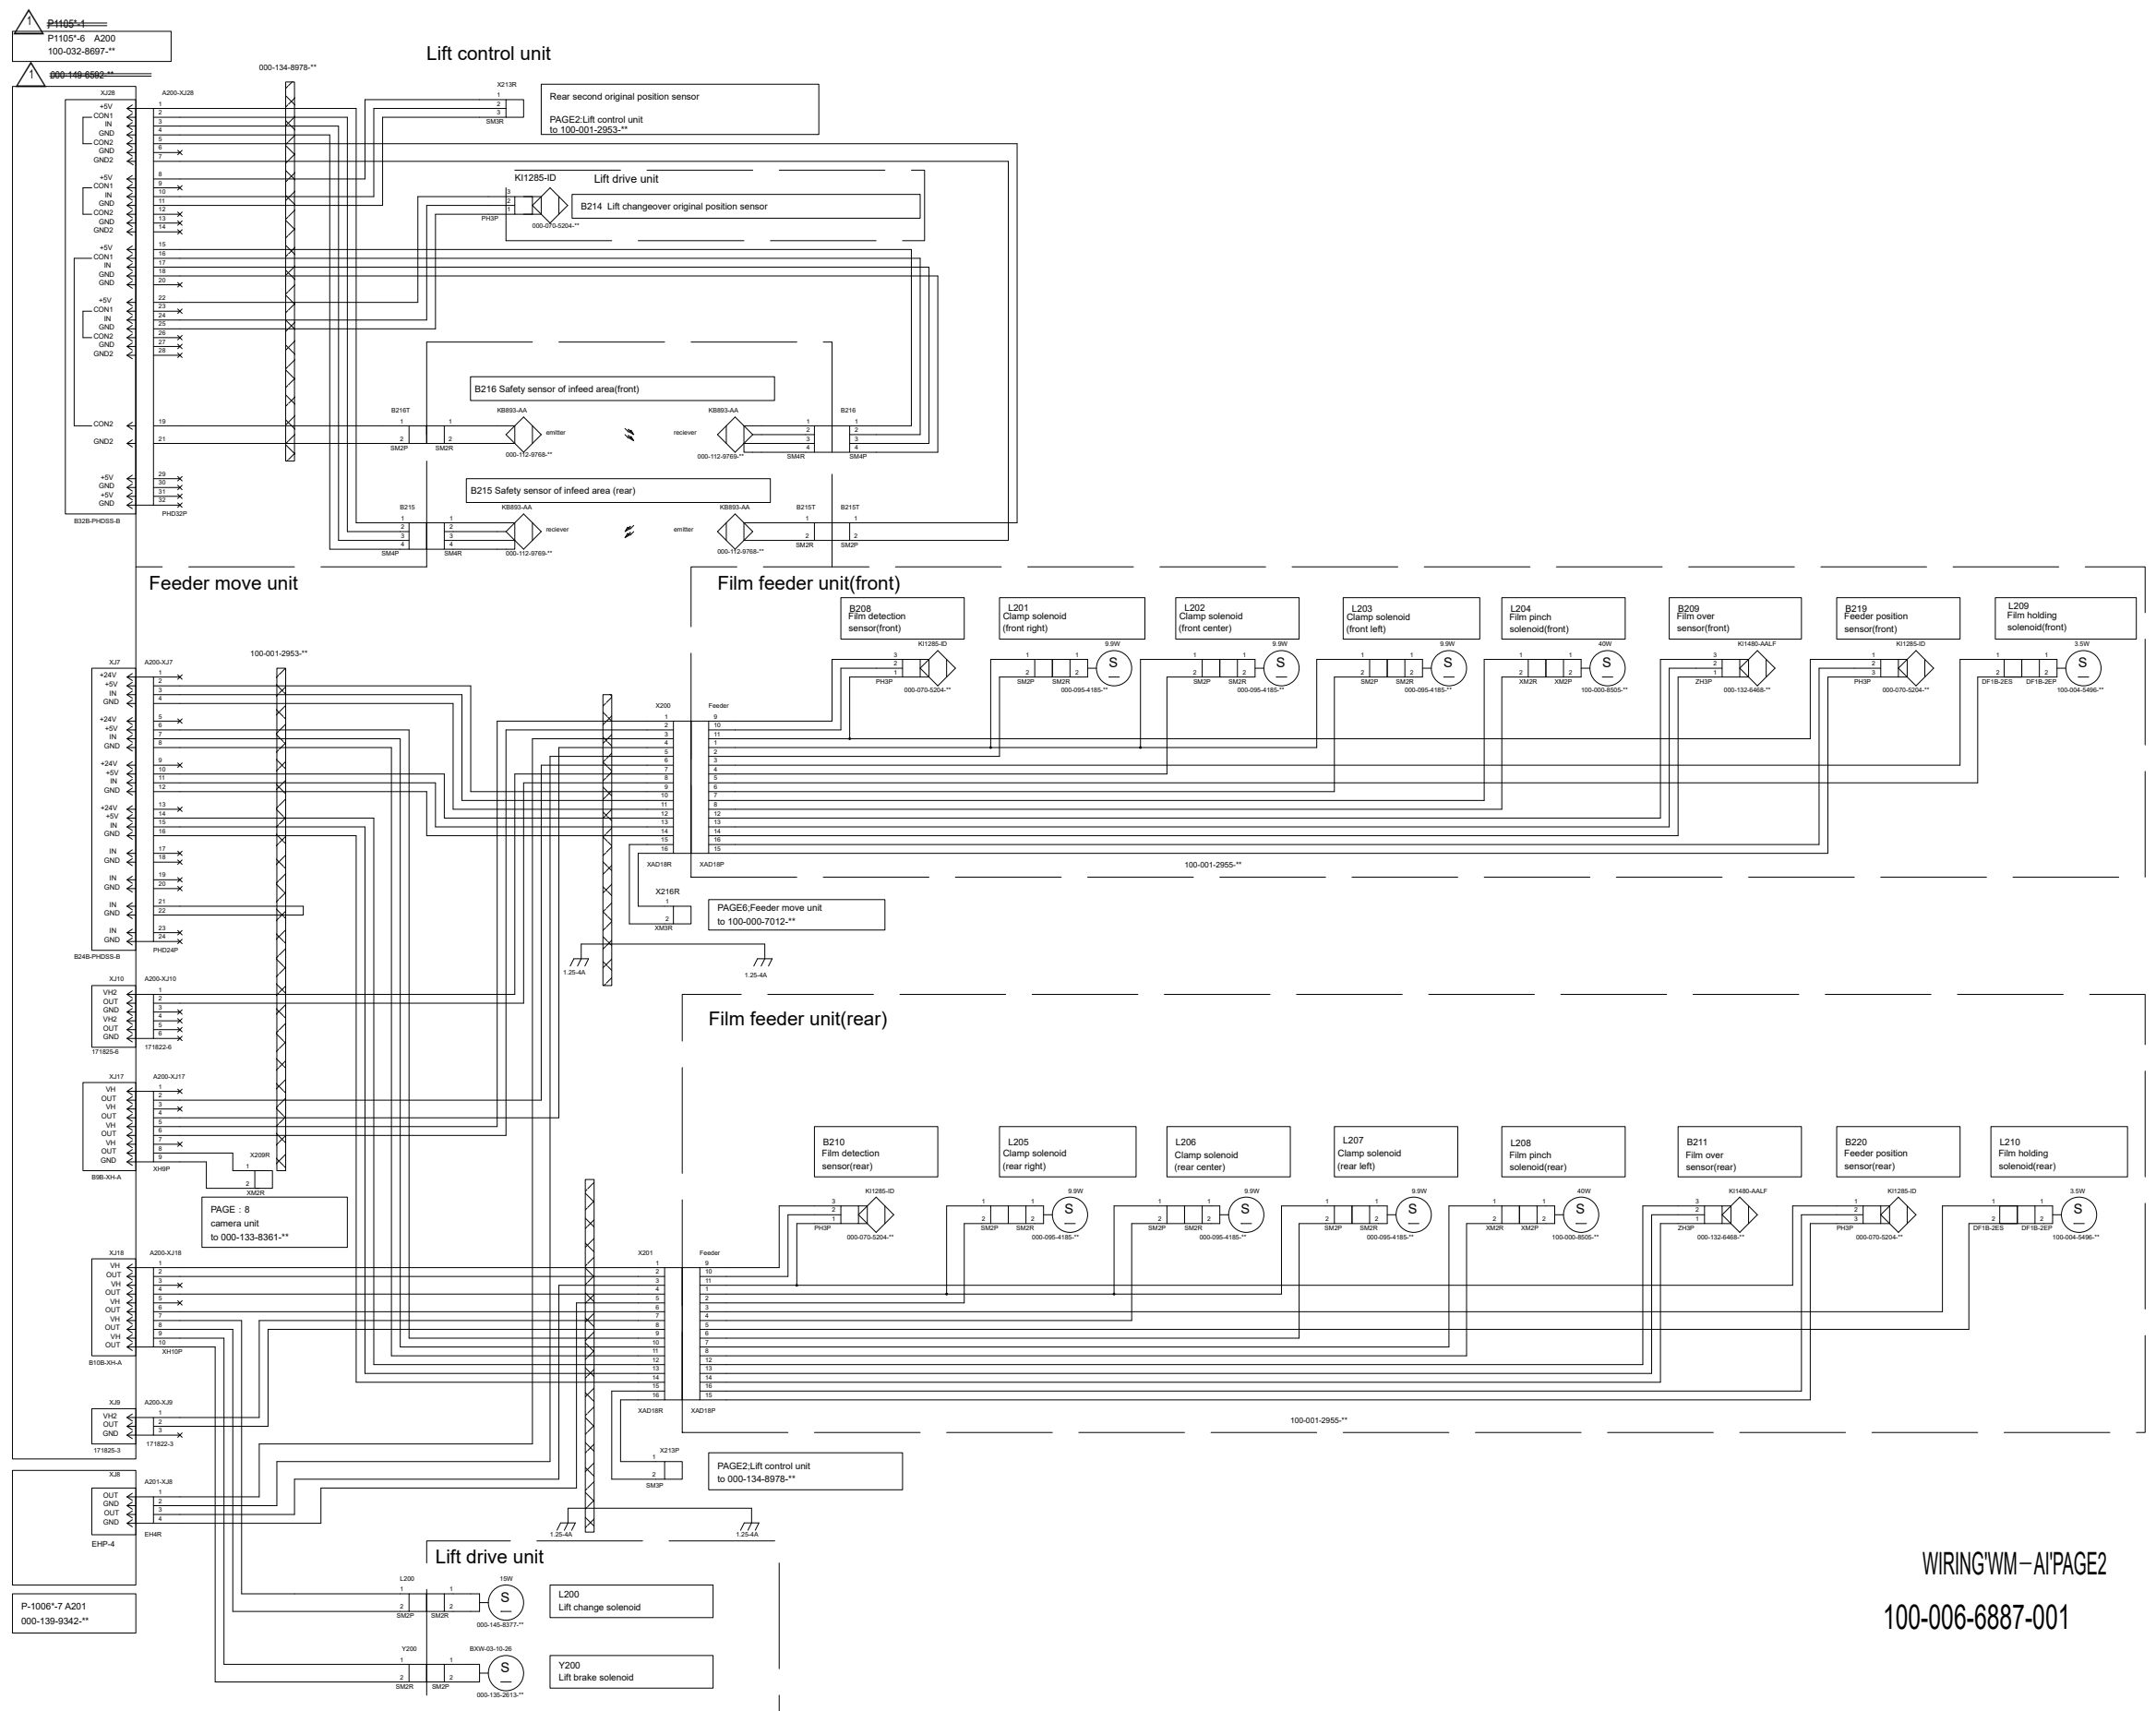






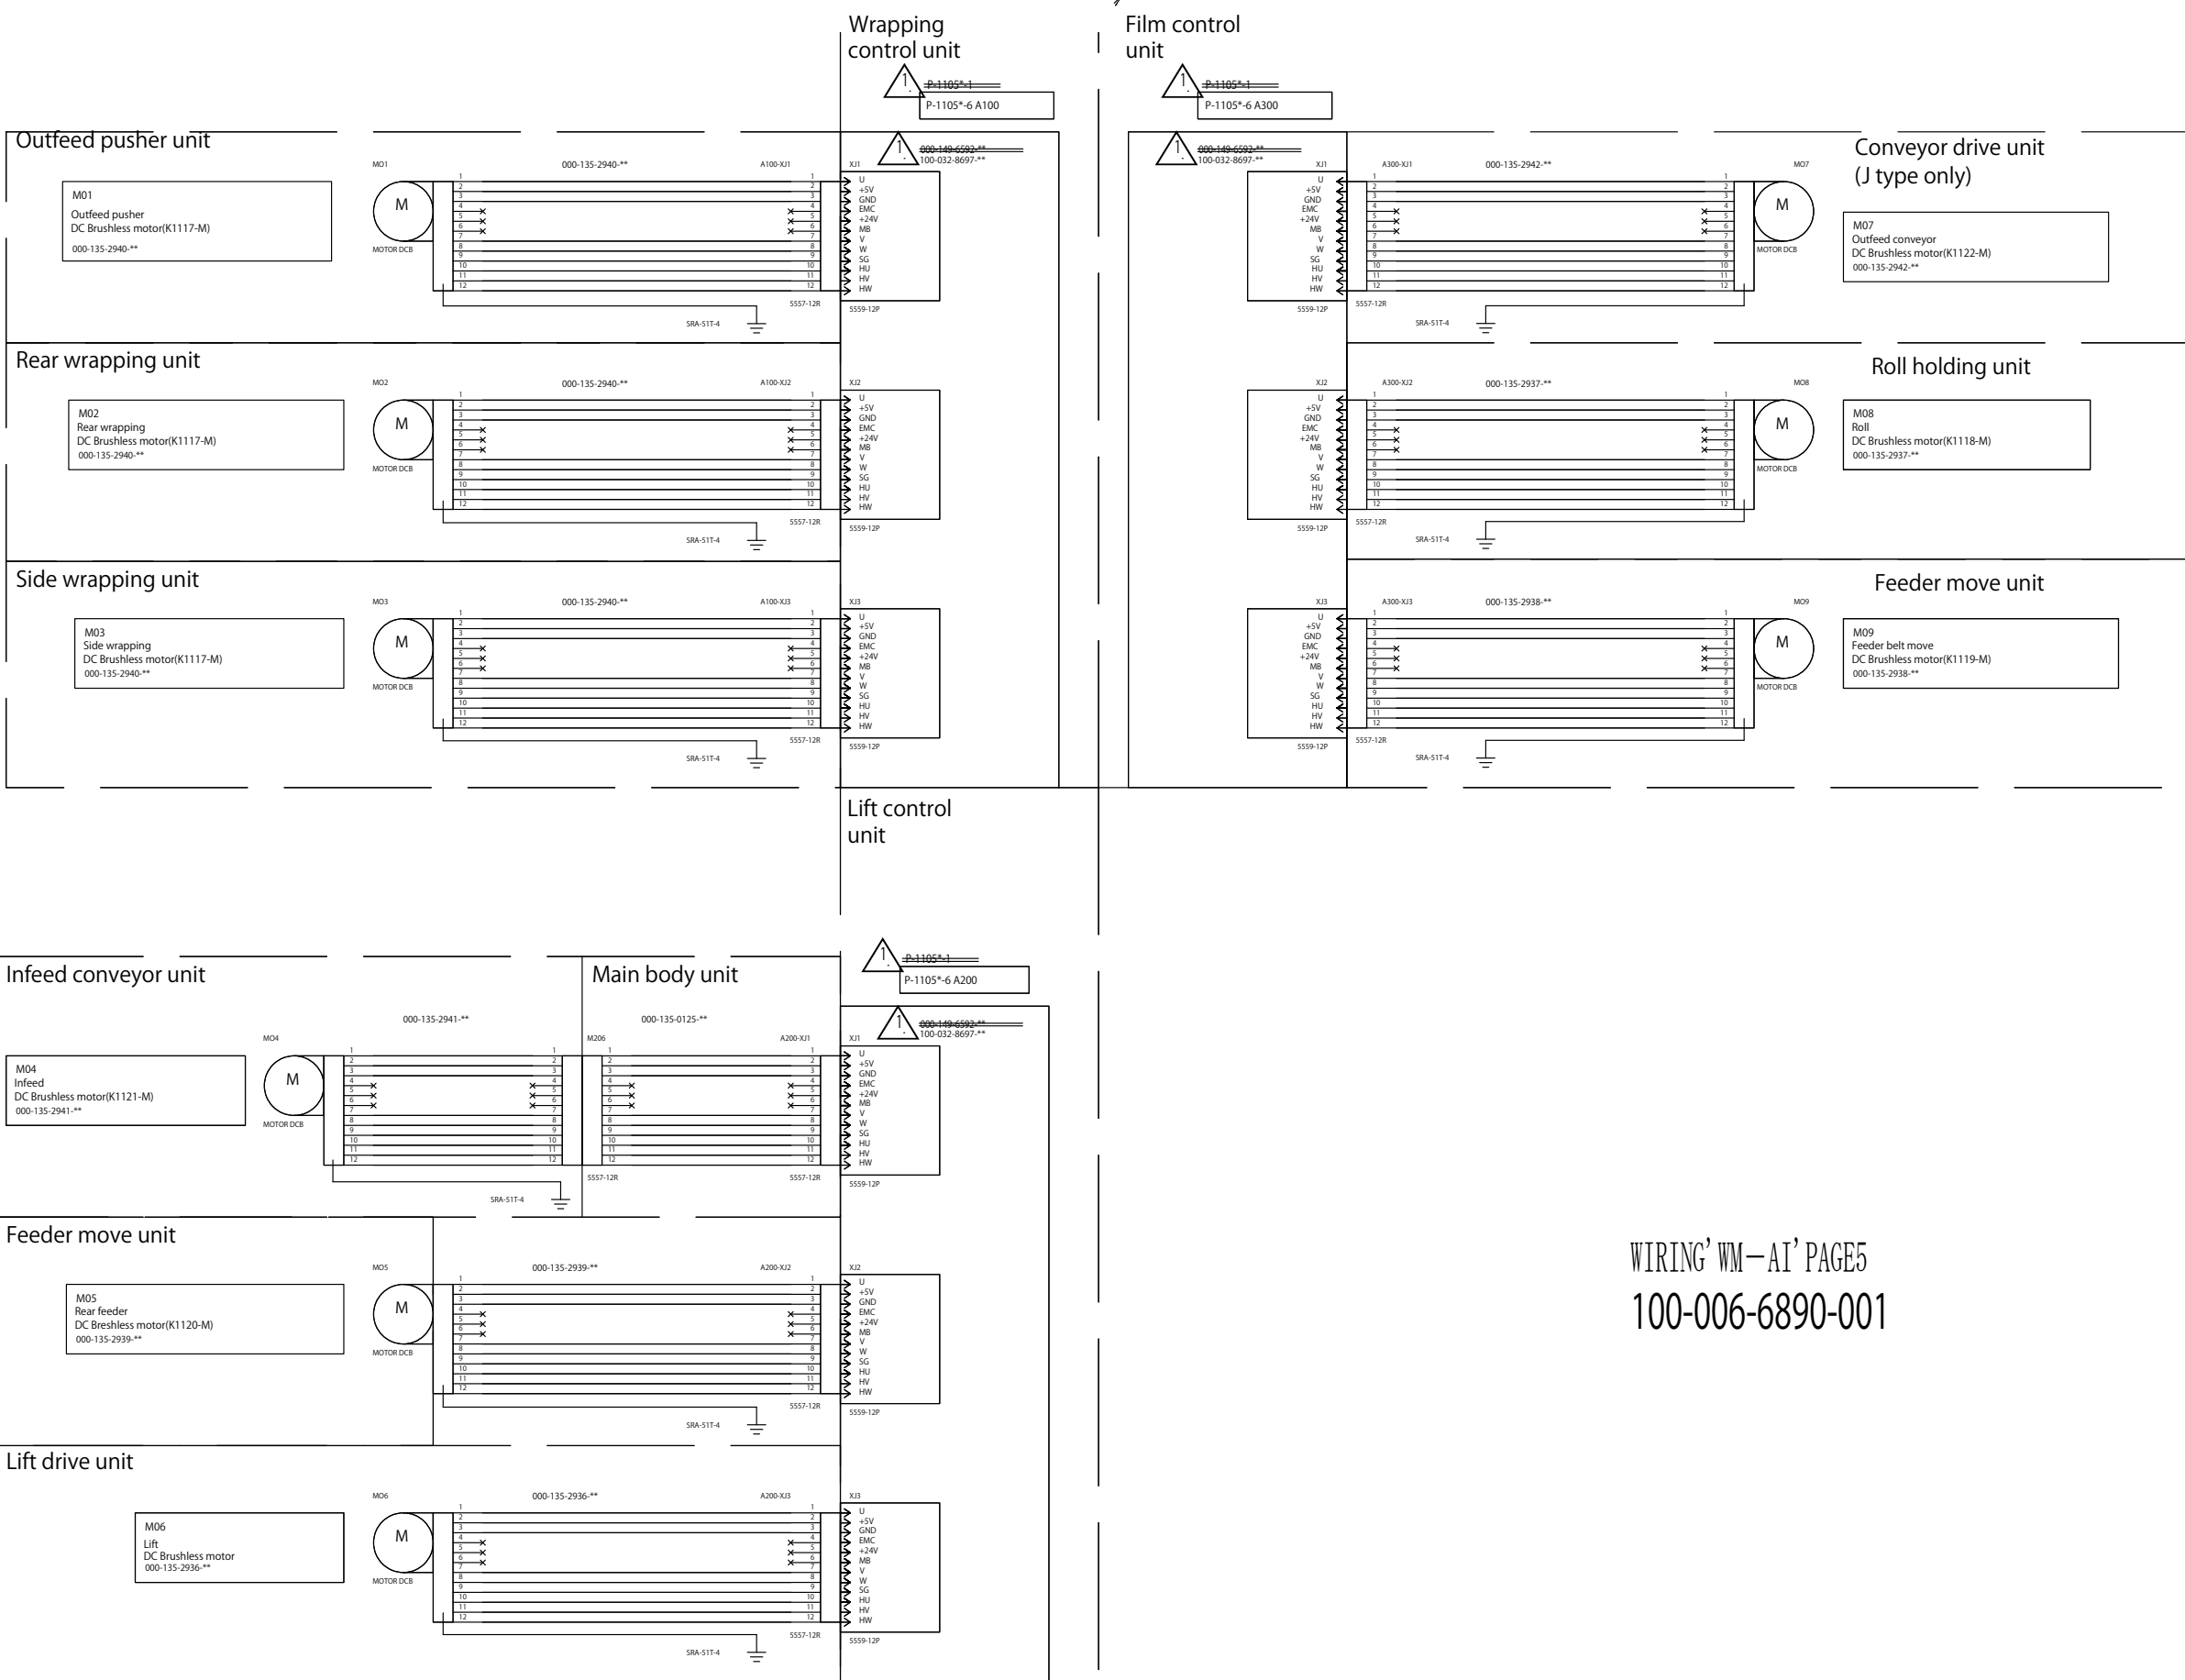


WIRING' WM-AI' PAGE5
100-006-6890-001

Film control unit

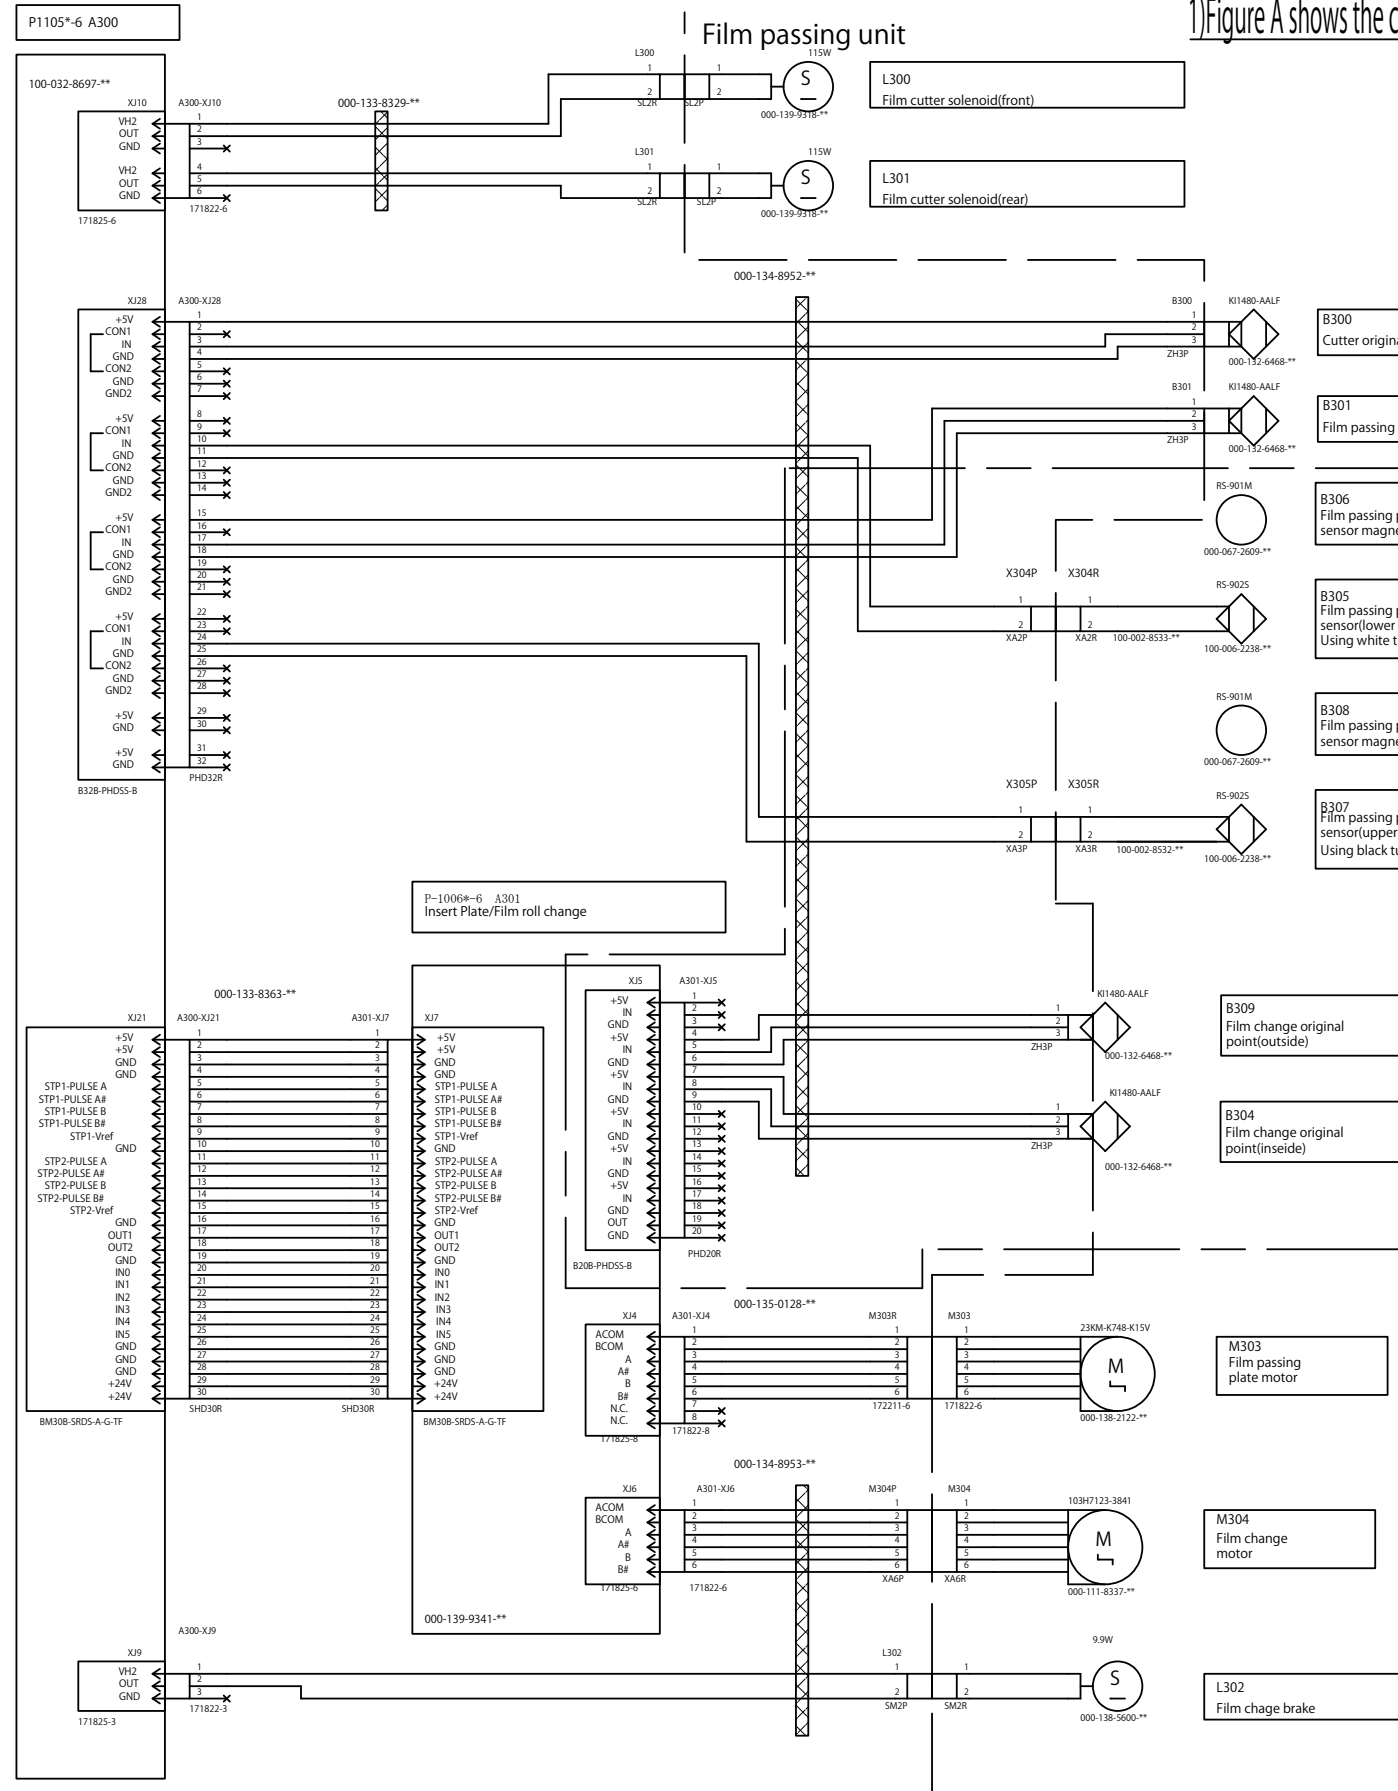

1)Figure A shows the case if the "B305" and/or "B307" sensors are KI1480 for the X part.

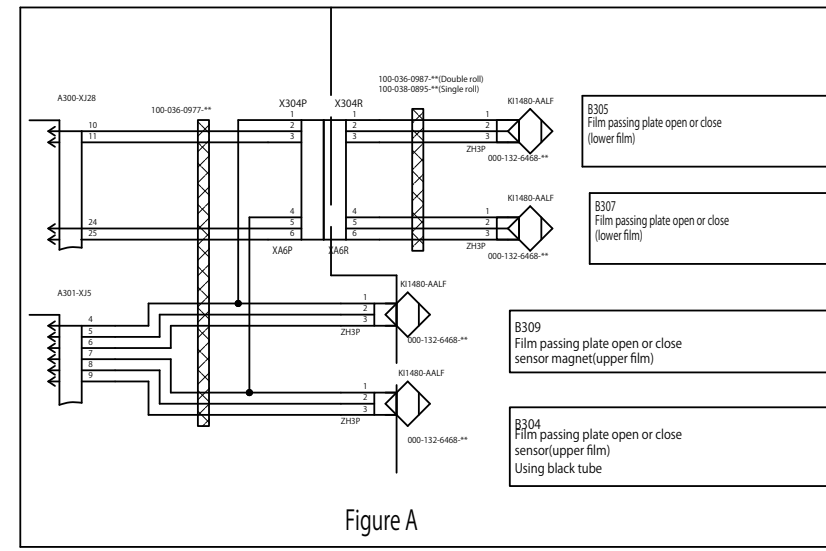


X part


WIRING' WM-AI' PAGE6
100-006-6891-002

Lift control unit

Feeder move unit

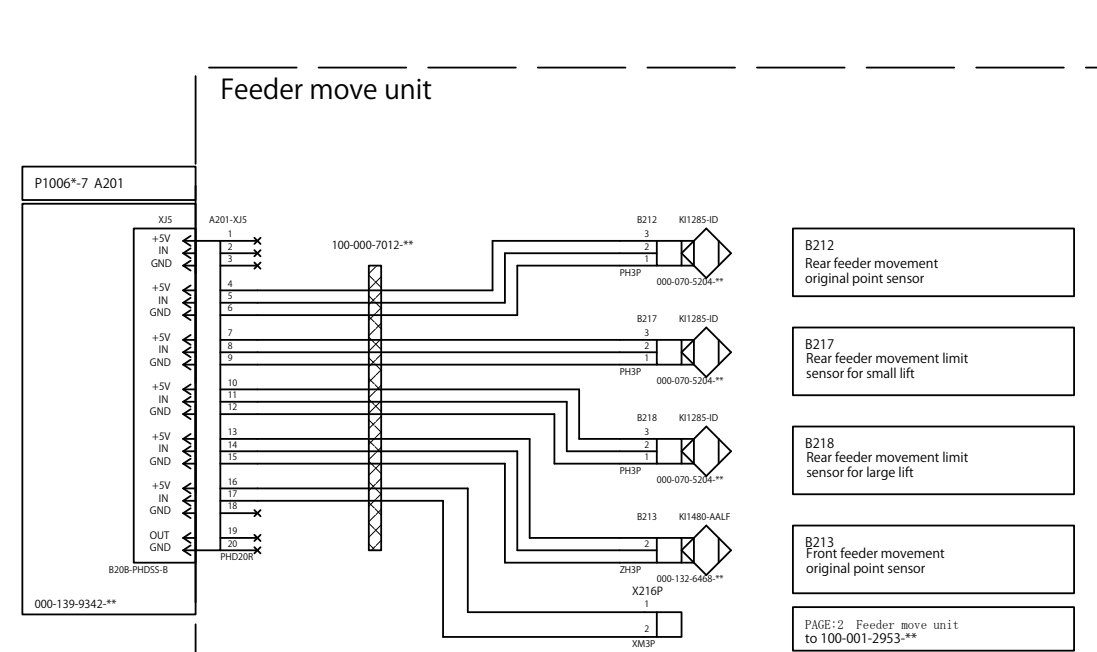



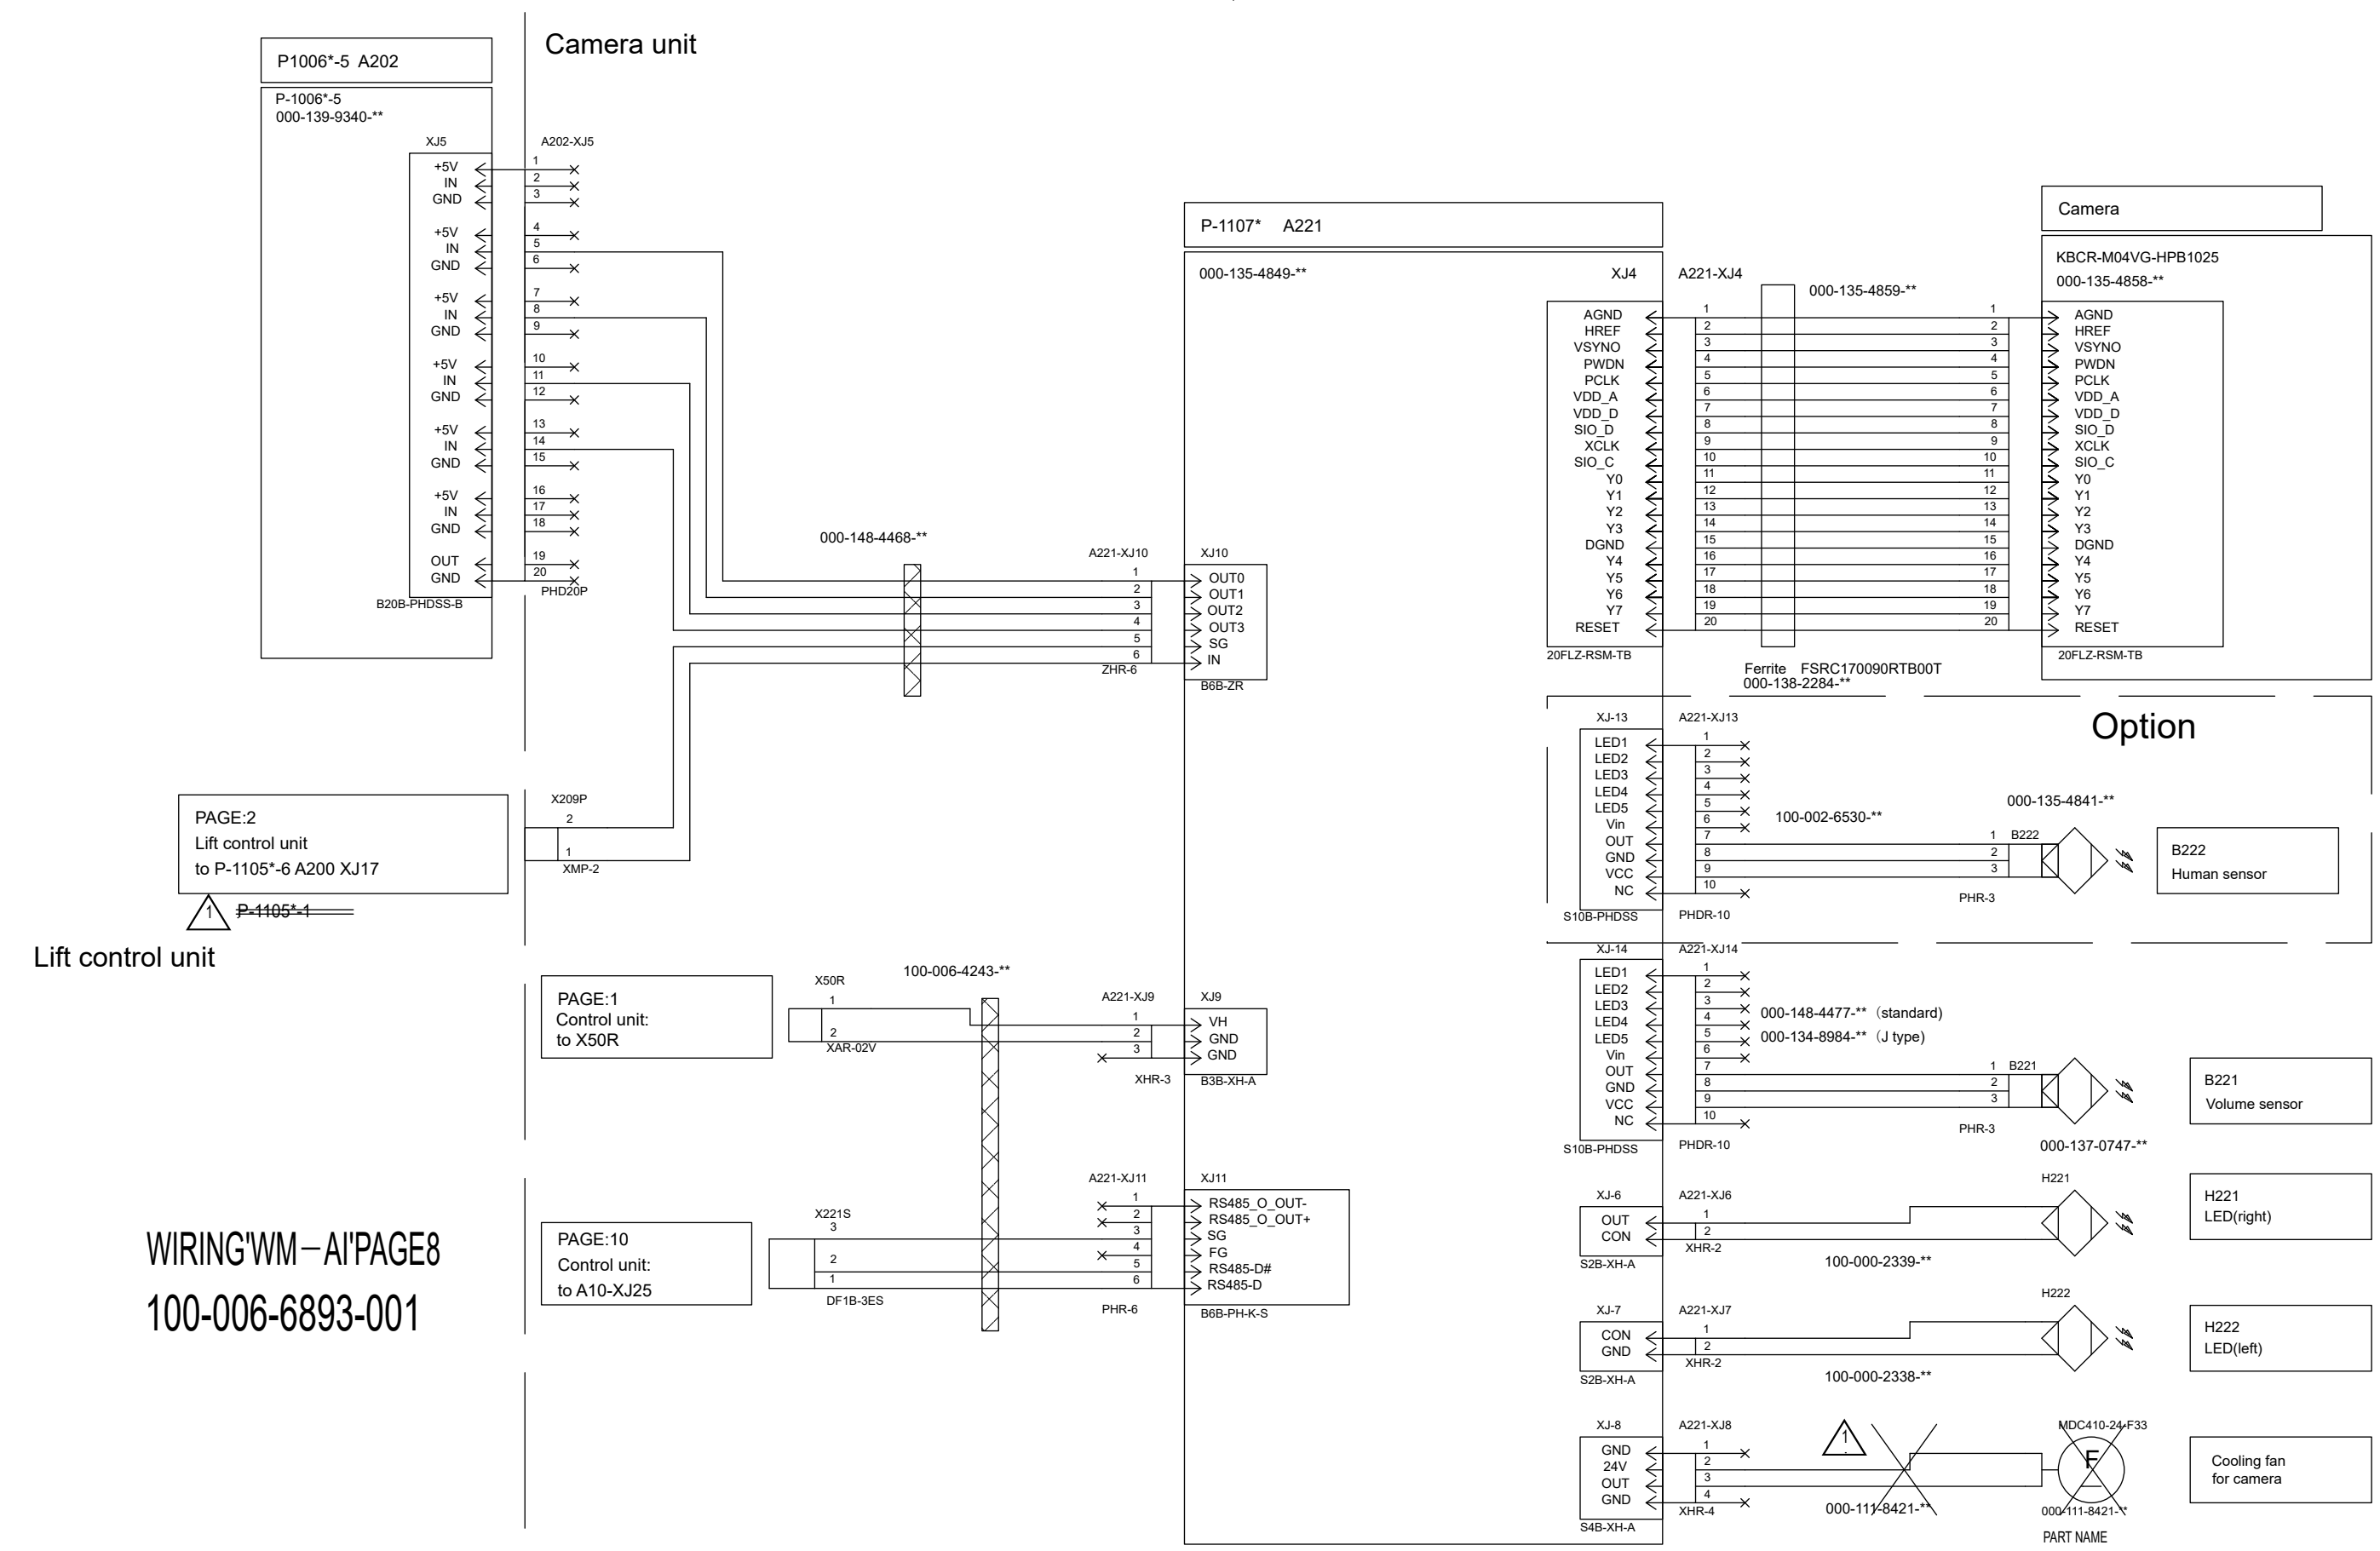


WIRING'WM-AI'PAGE8
100-006-6893-001




Wiring Diagrams


Page 10 100-006-6895-003

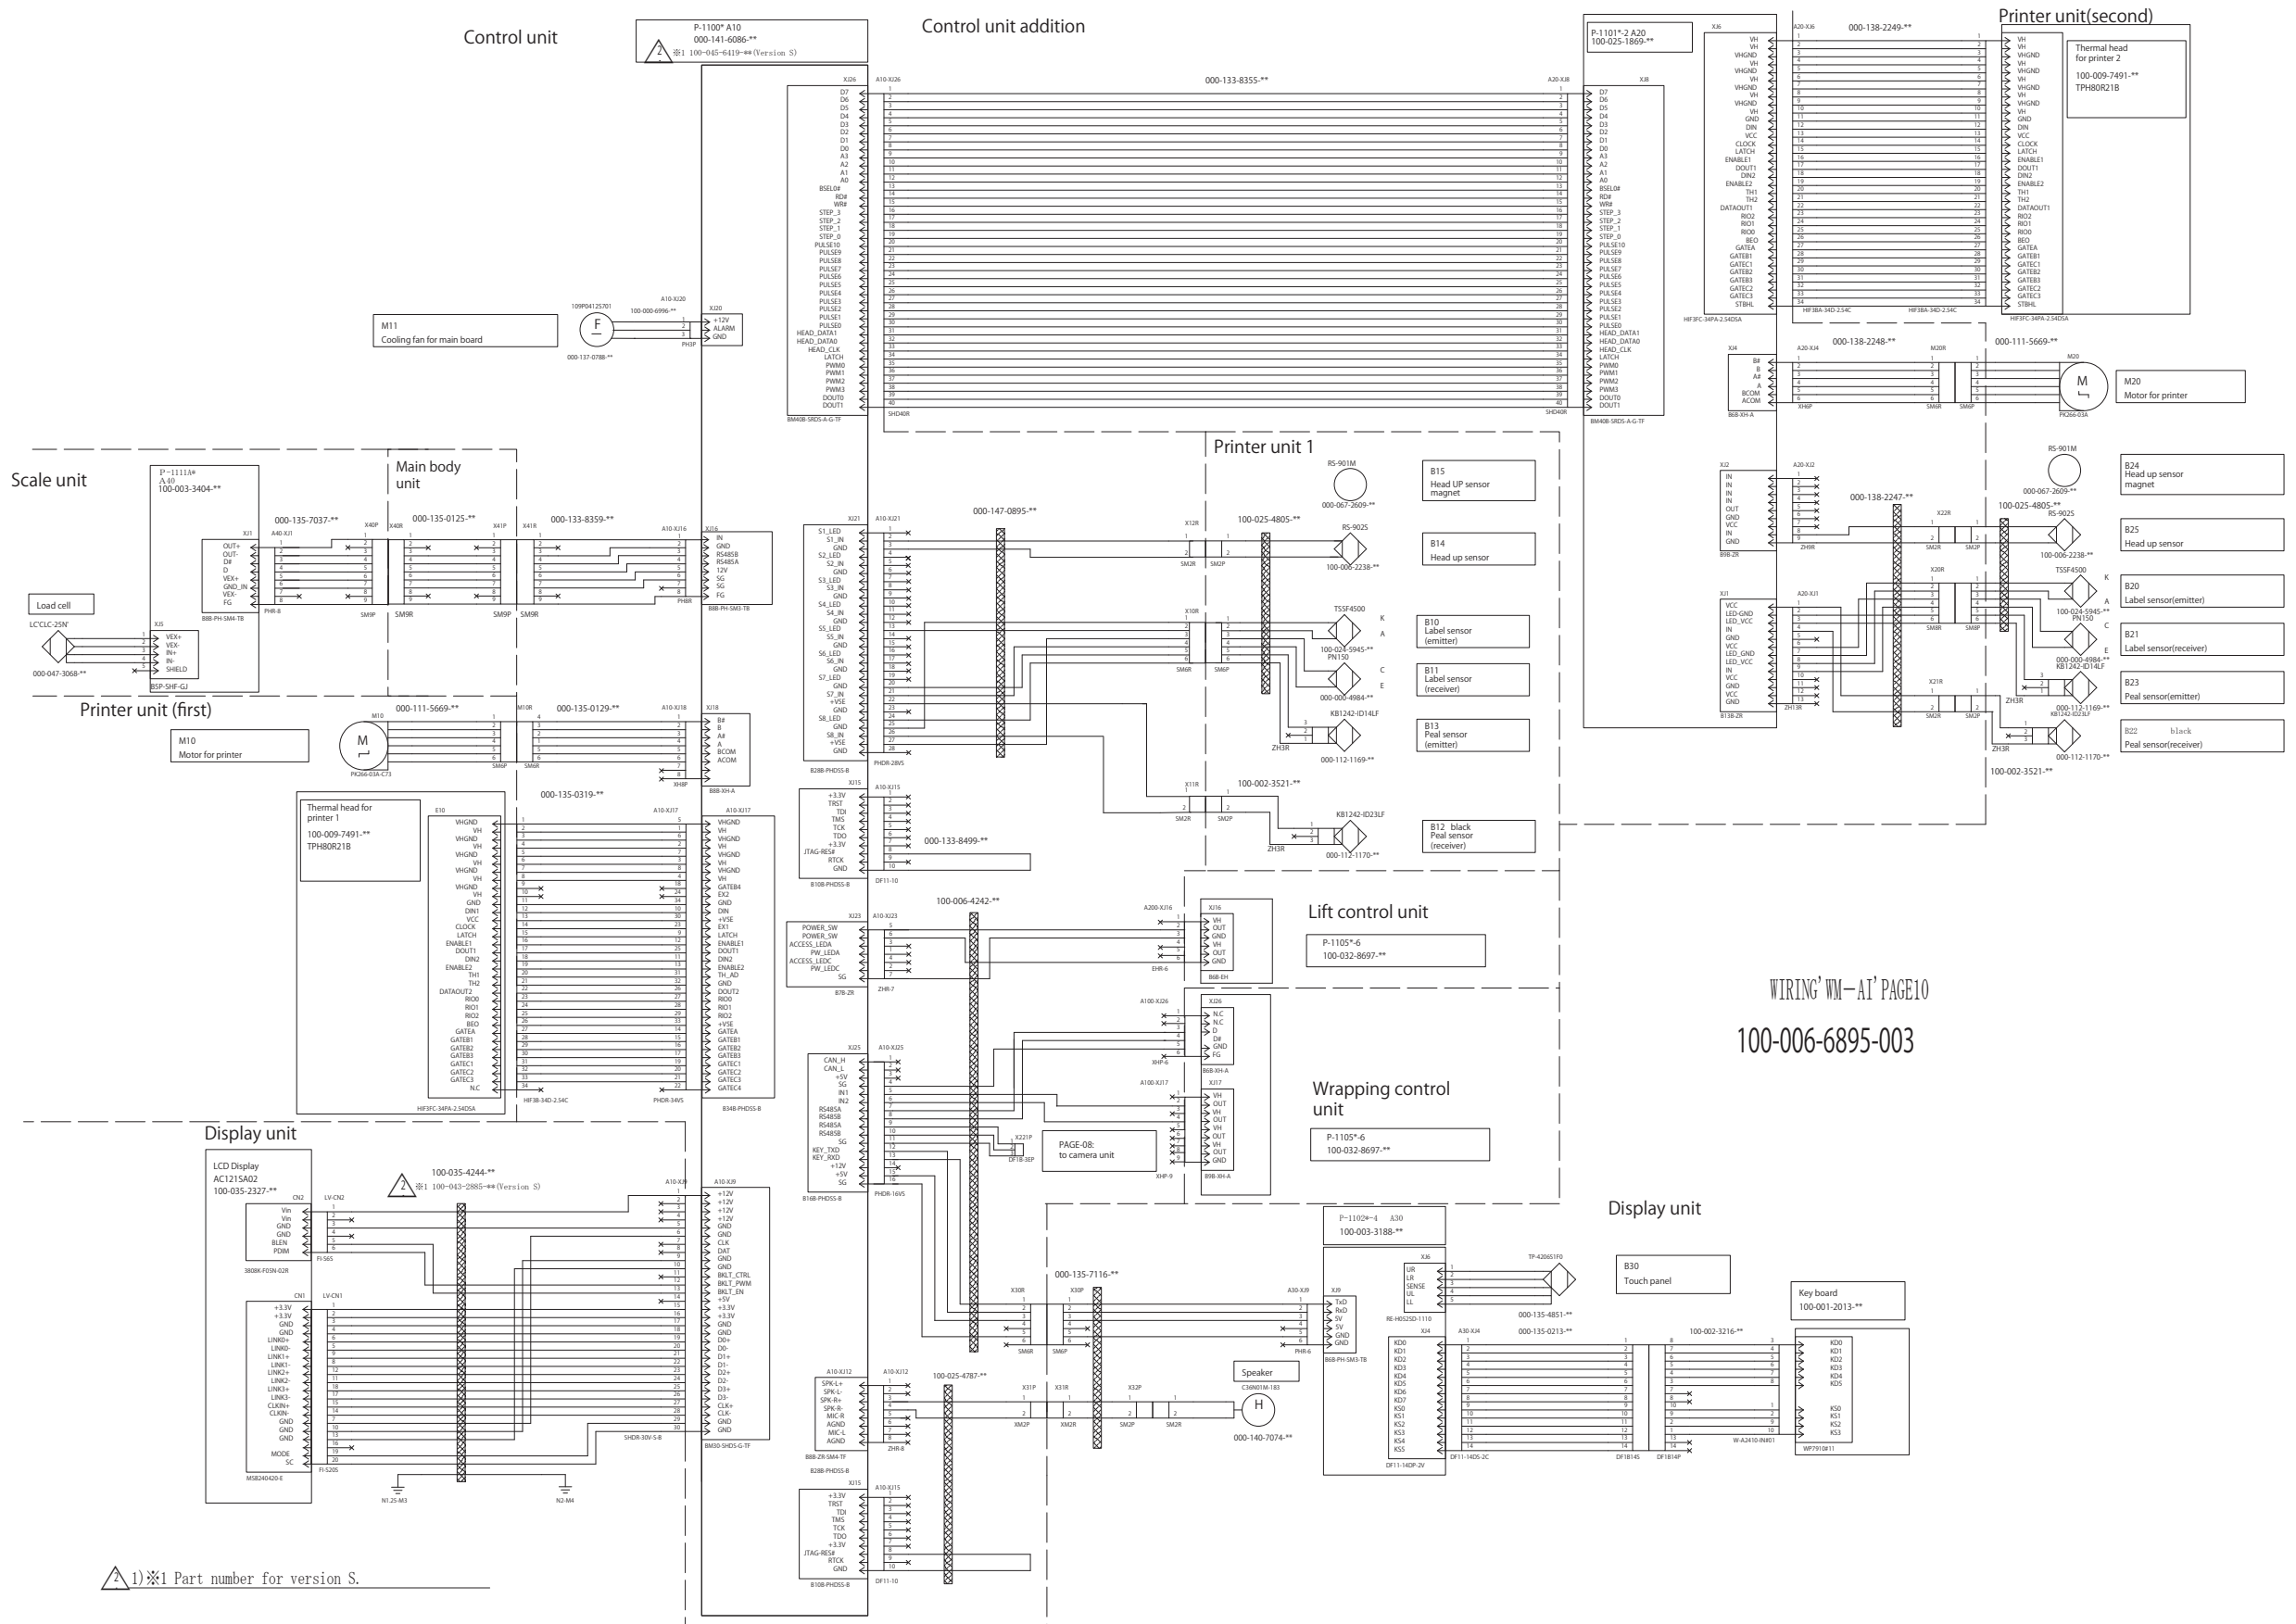


① 1) 1 Part number for version S.

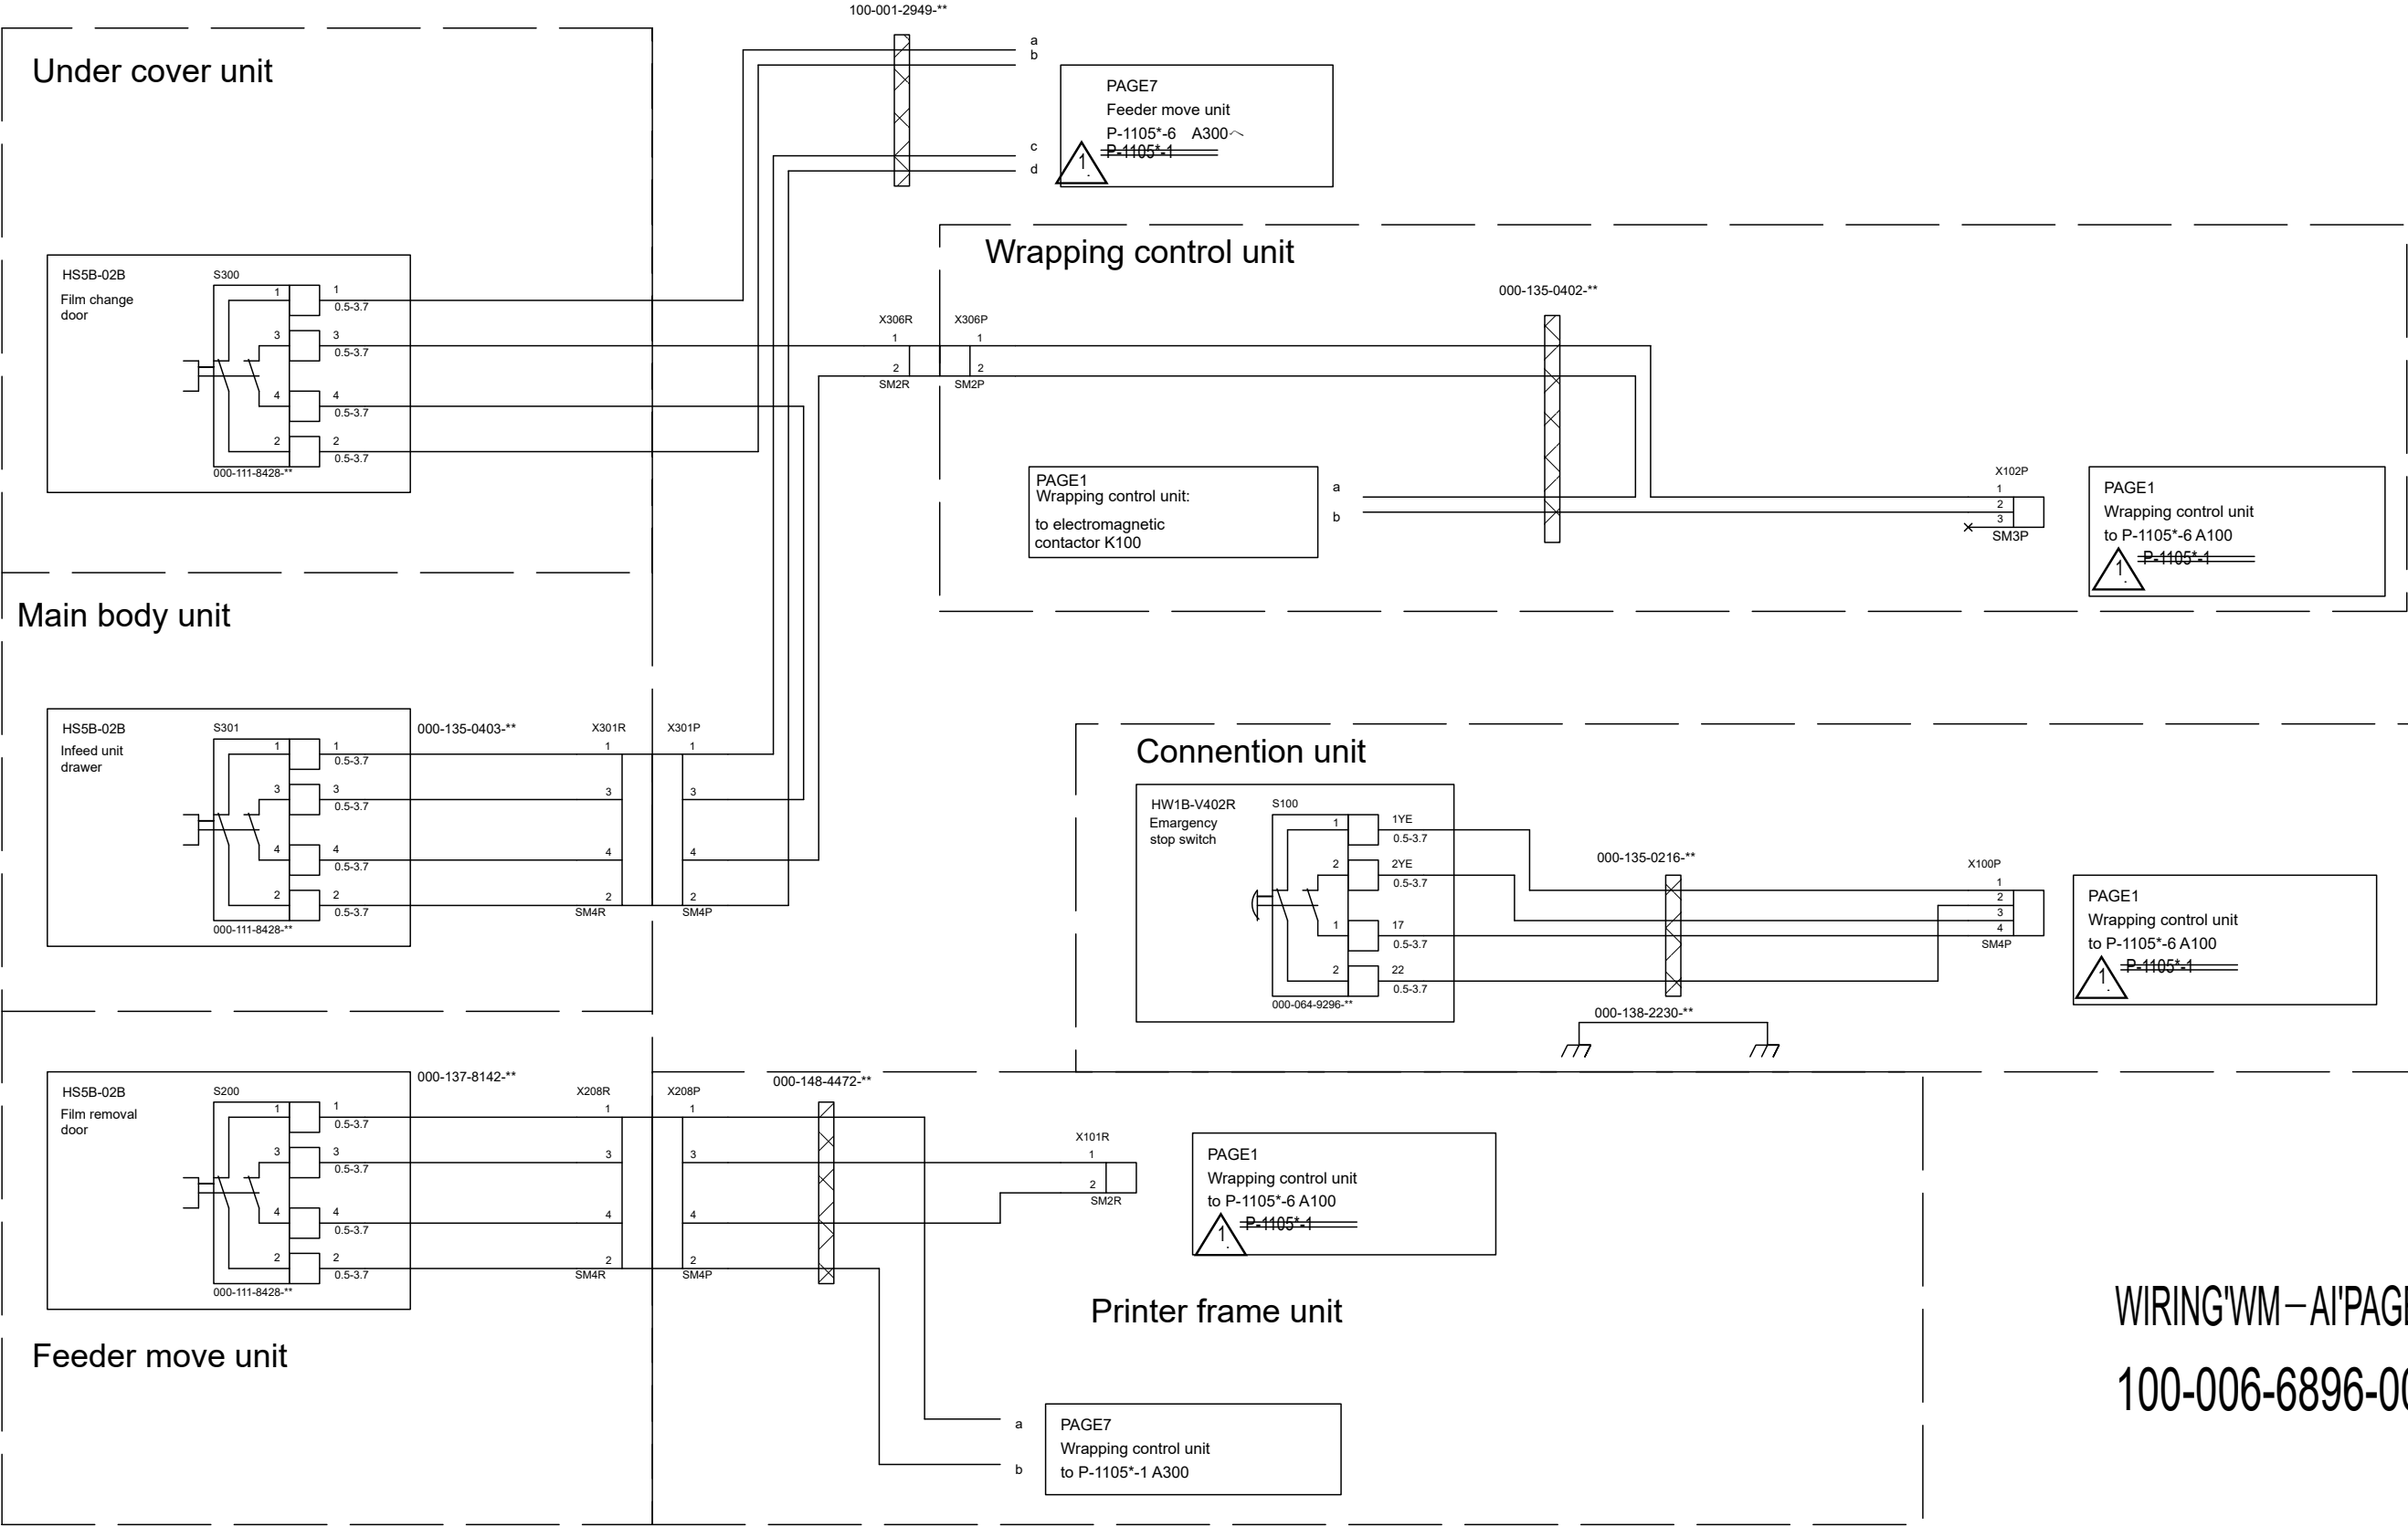

WIRING'WM-AI'PAGE11
100-006-6896-001

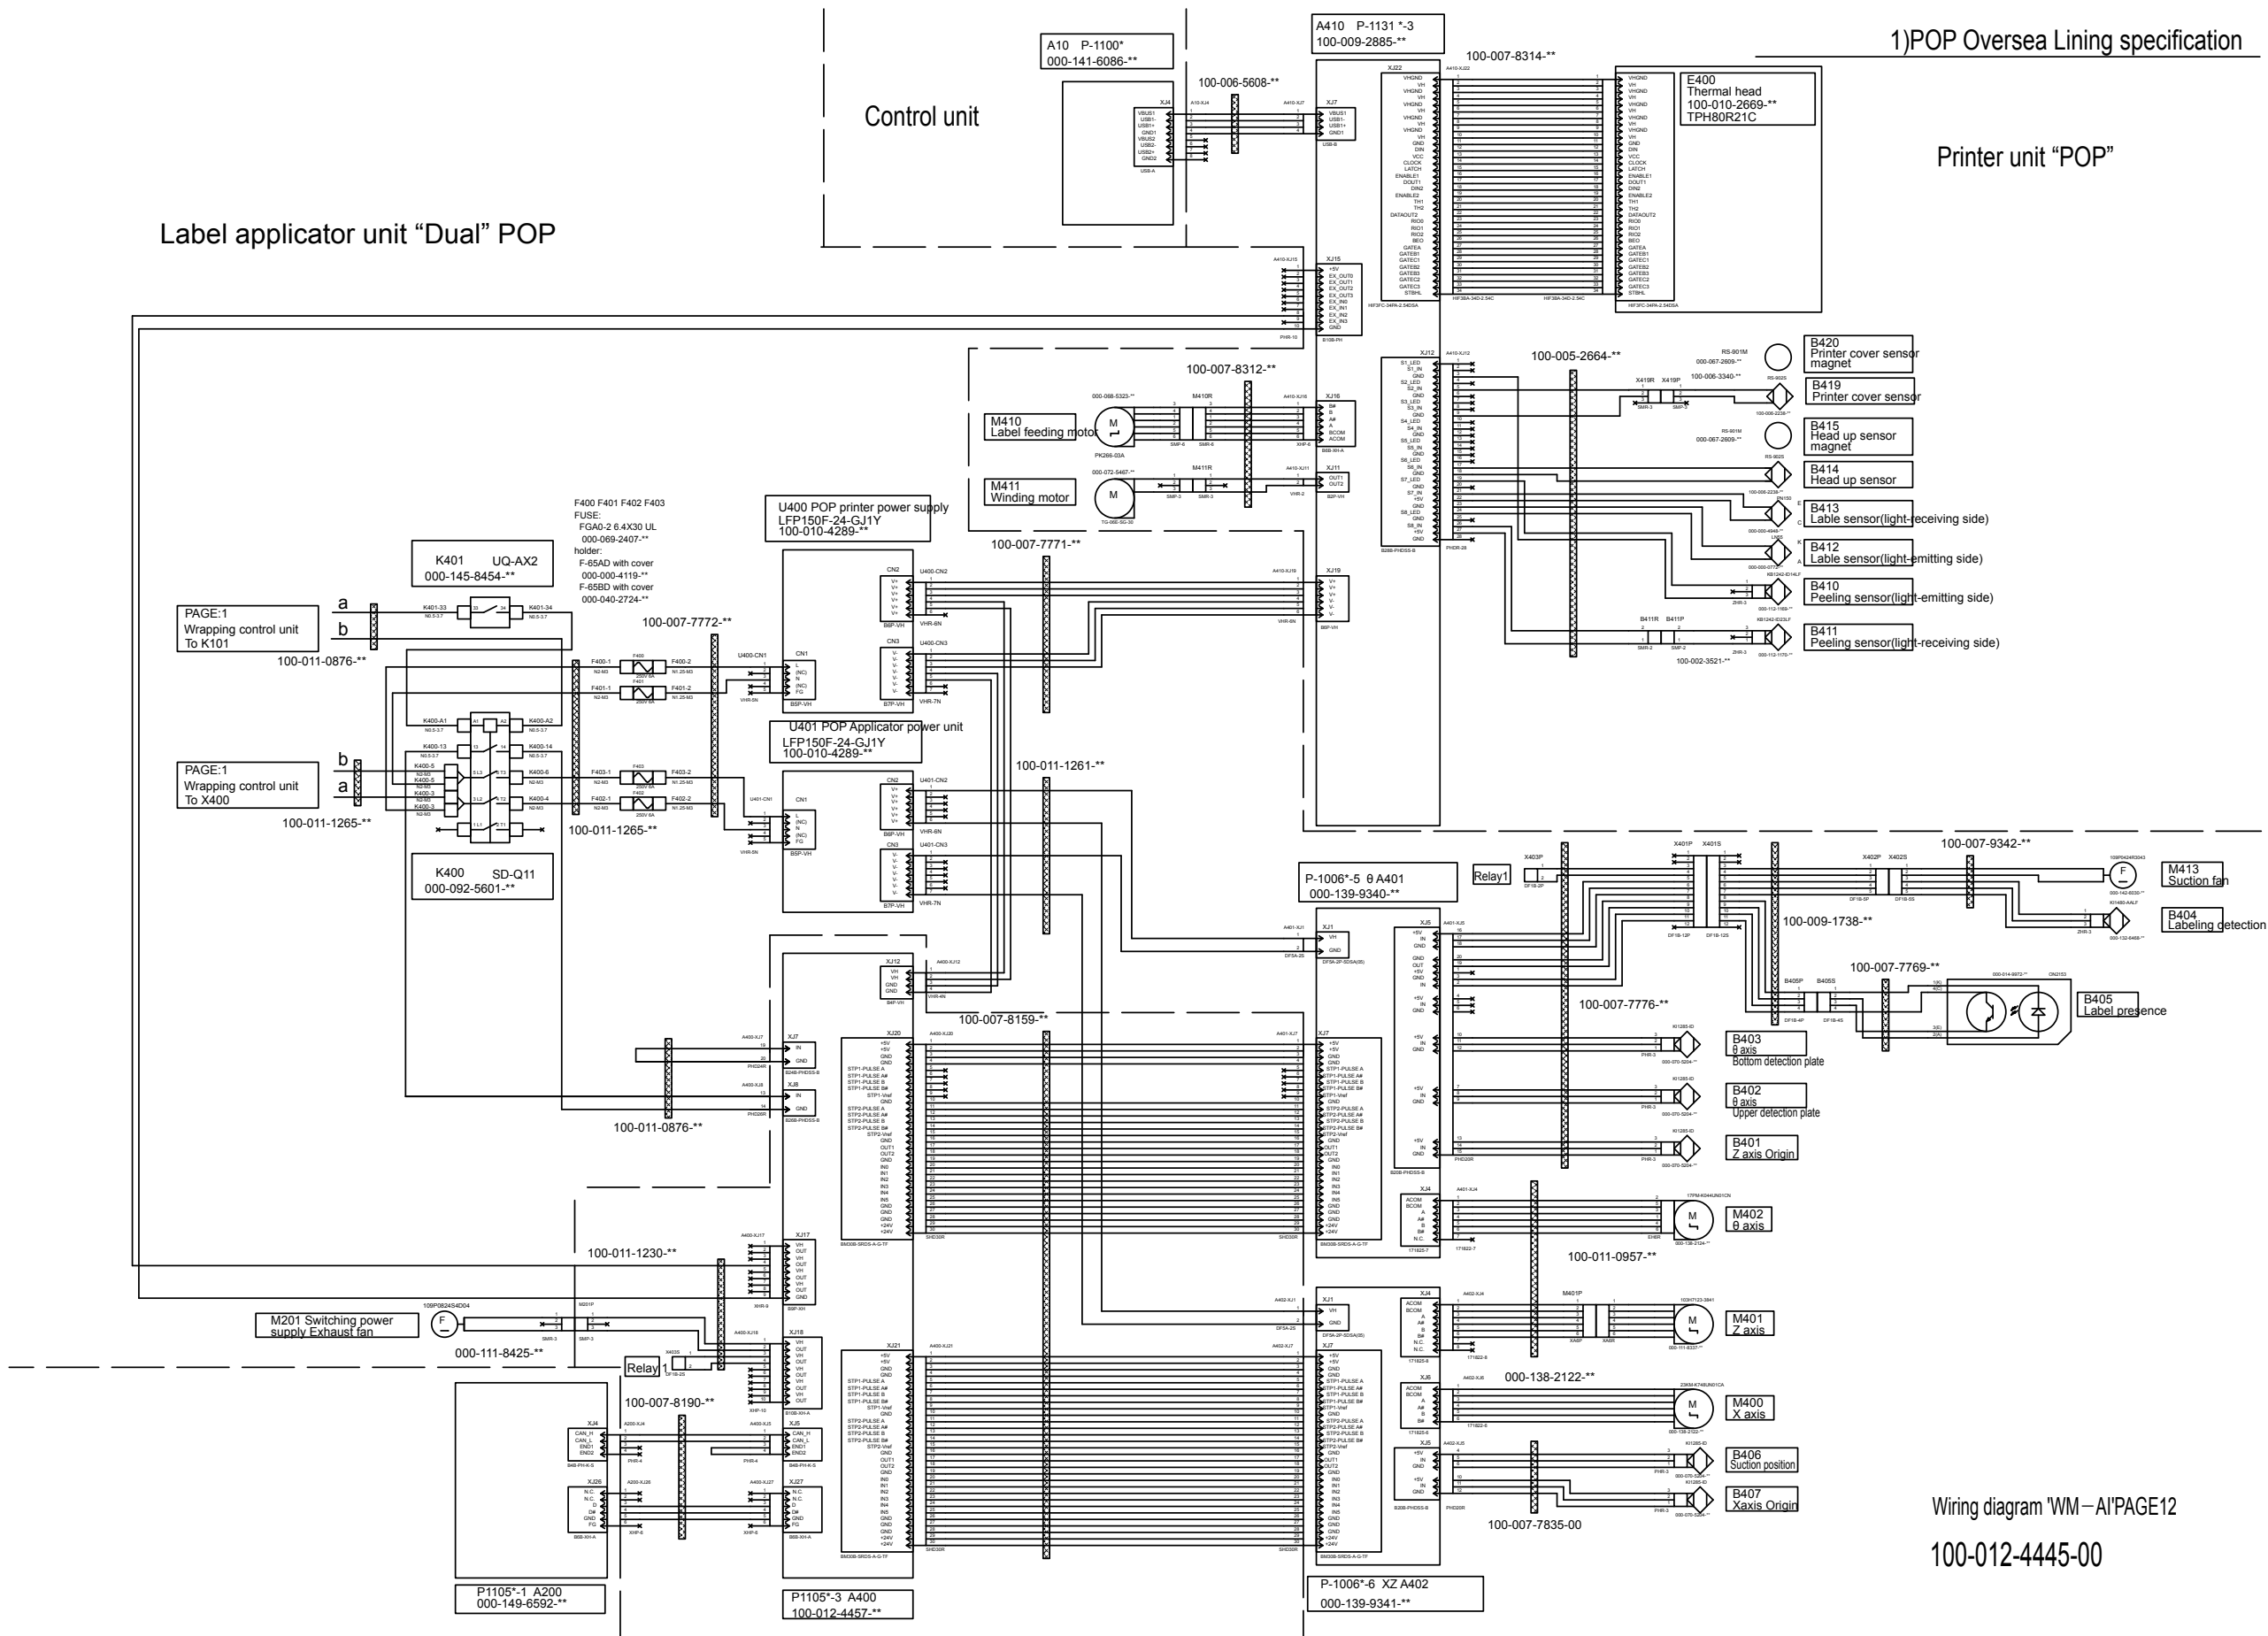



Labeling unit

S350
Detachment/attachment switch of Labeling conveyer
HS5D-03RN
100-009-2774-**

S351
Withdrawing switch of Underlabeller printer
HS5B-02B-TK2454
000-111-8428-**

M353
Label carrying stepping motor


350
label carrying solenoid

351
label carrying fan

350
label suction fan

Lift control unit

Printer unit: JWF

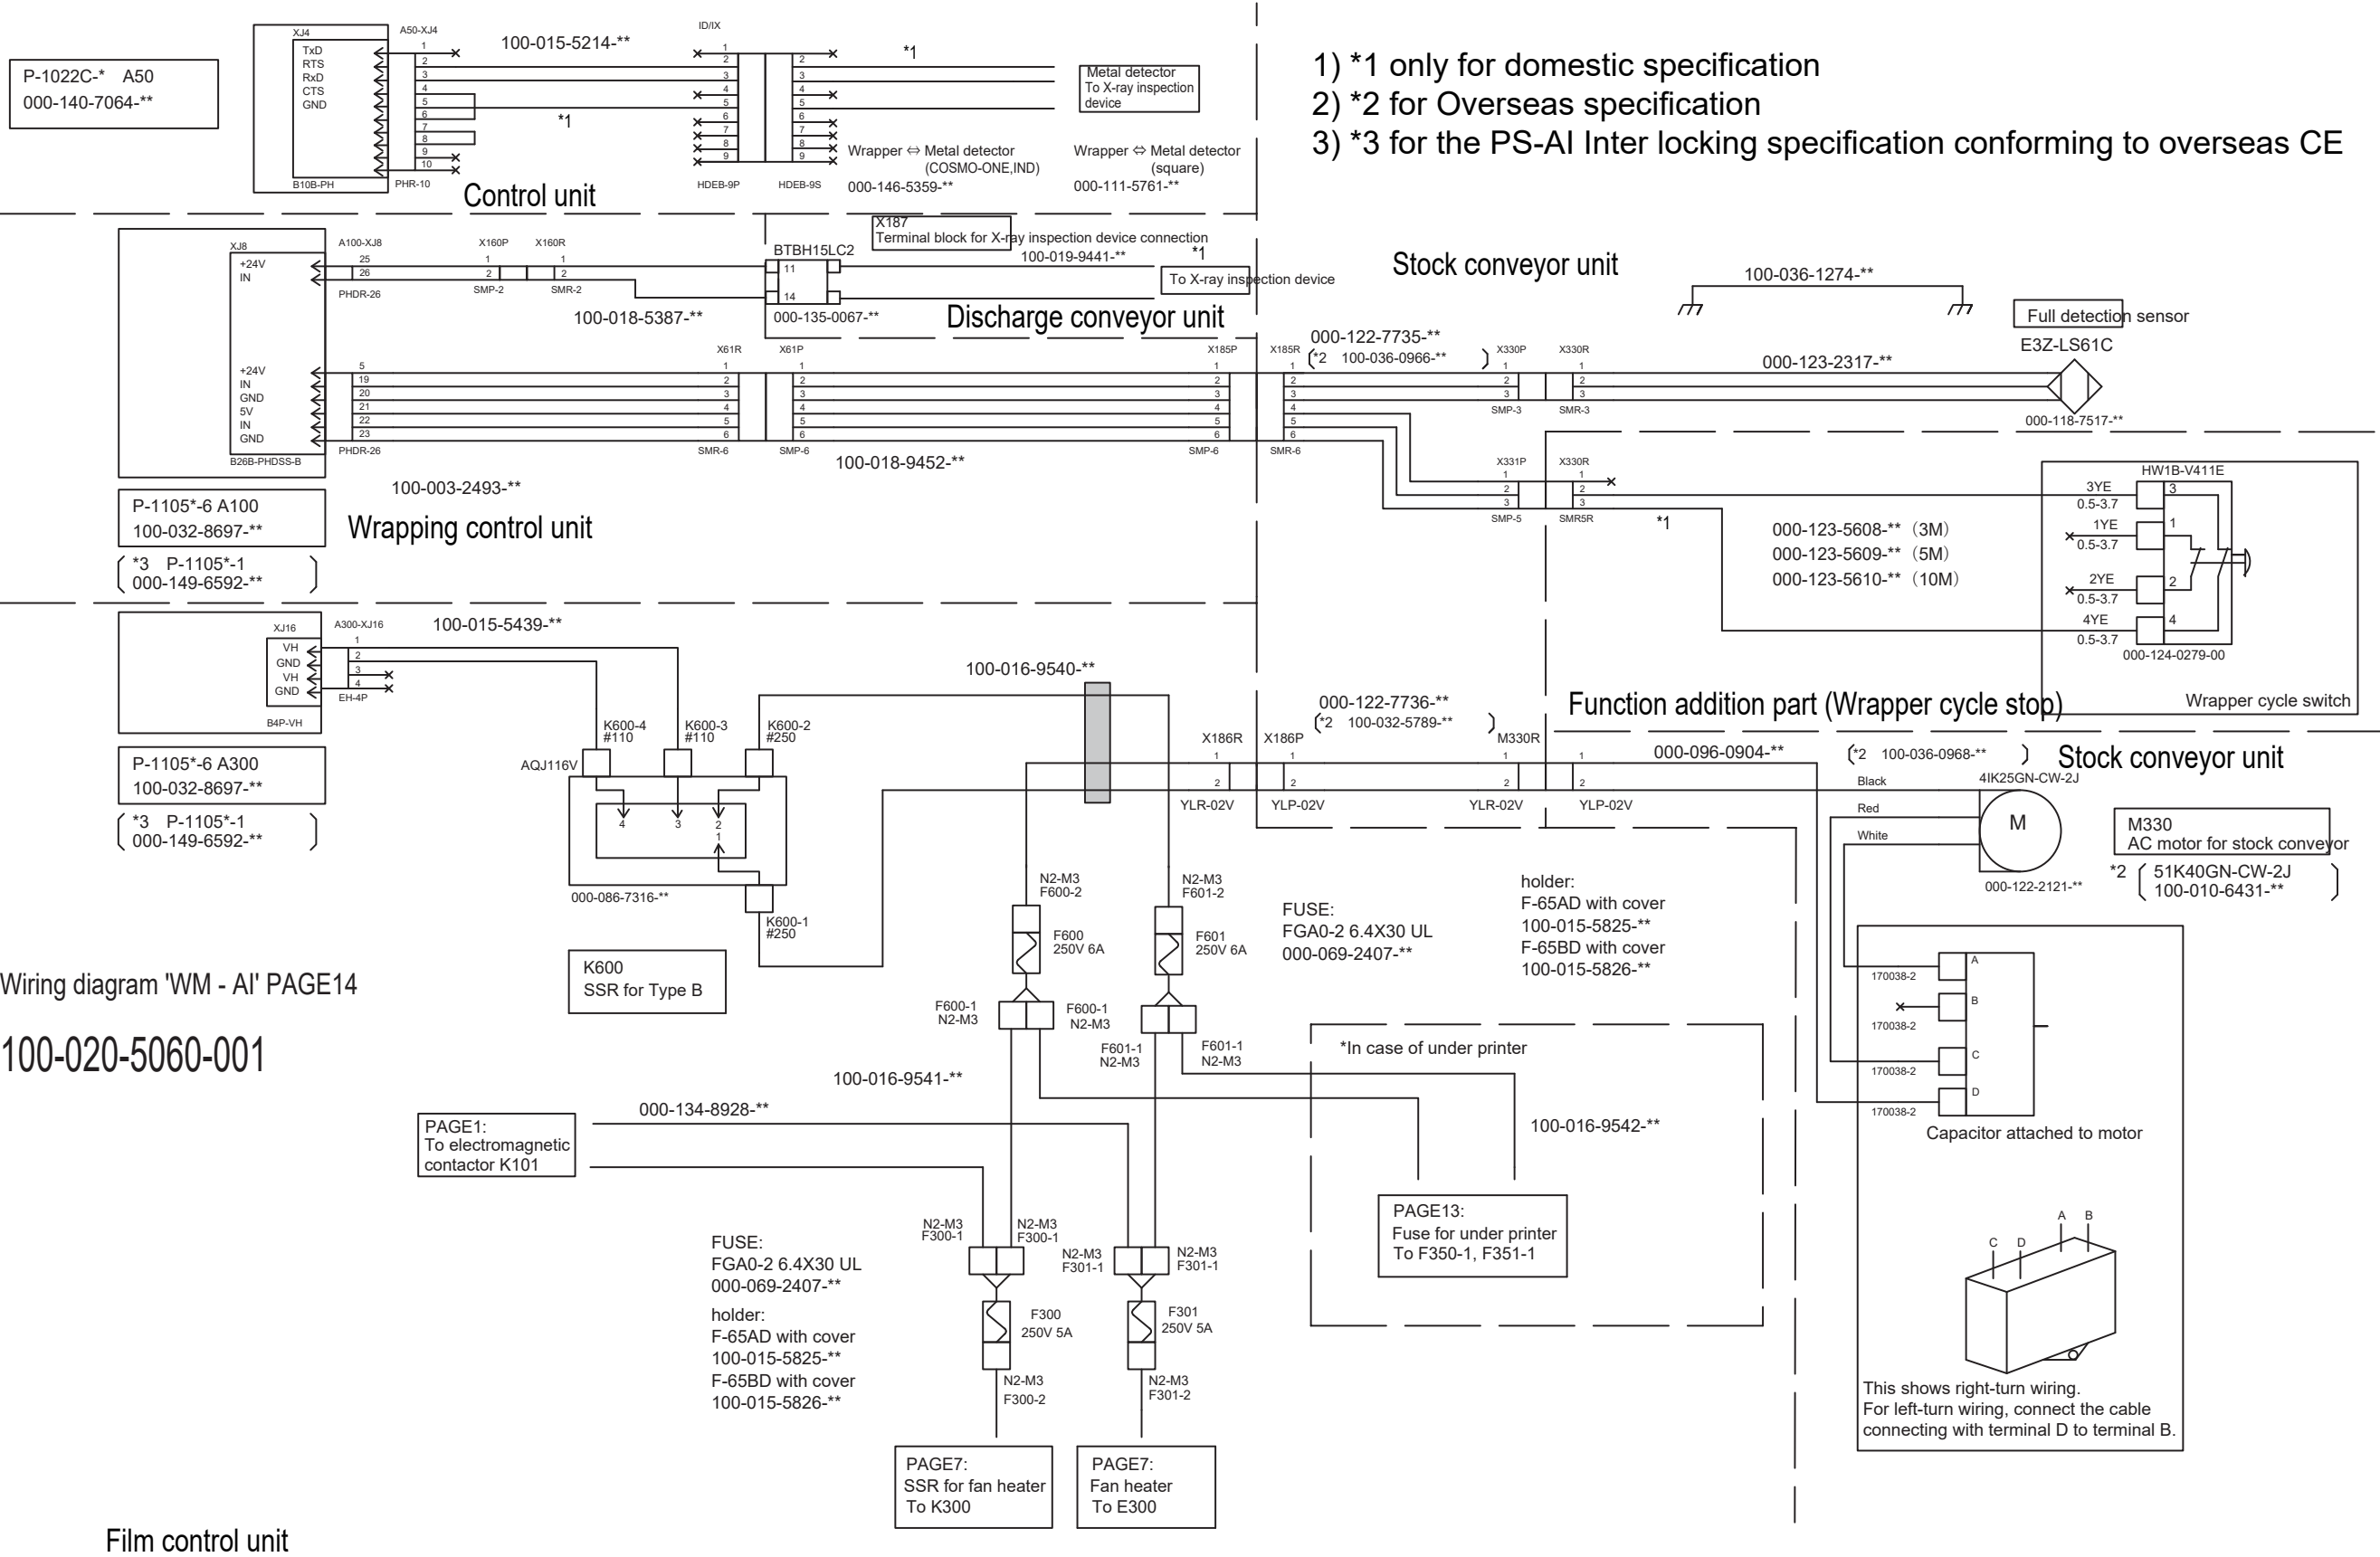

Wiring diagram 'WM - AI' PAGE14
100-020-5060-001

Film control unit

